

INSTRUCTIONS CAREFULLY.

HOW TO PLAY WITH YOUR BOXER

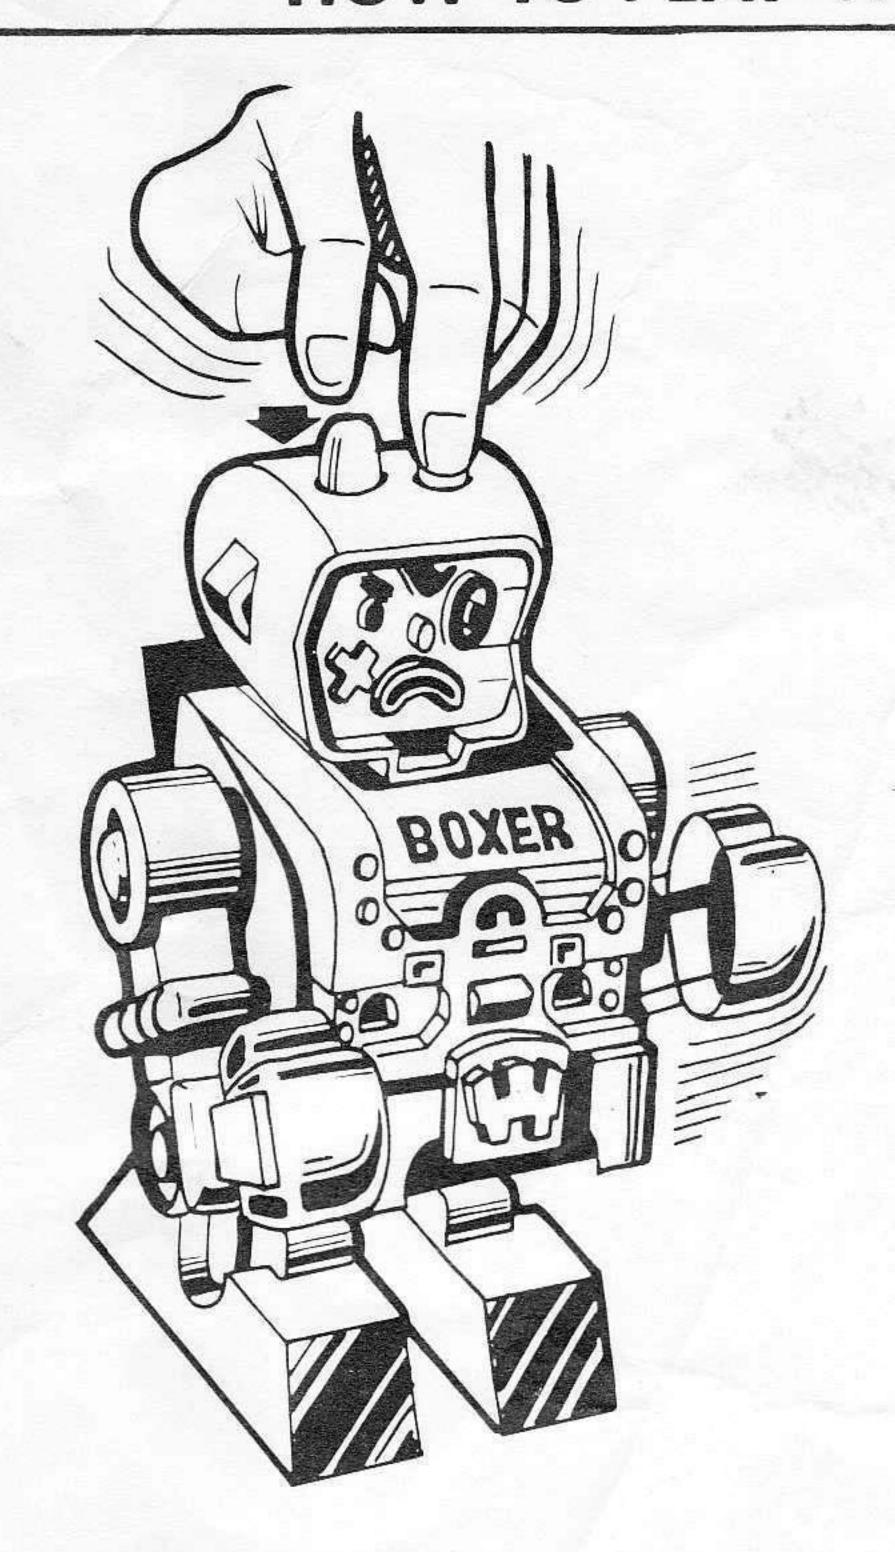

- 1. PRESS LEFT BUTTON TO RAISE LEFT ARM.
- 2. PRESS RIGHT BUTTON TO RAISE RIGHT ARM.
- 3. PRESS ONE BUTTON AFTER THE OTHER AND BOXER WILL FIGHT.

IMPORTANT

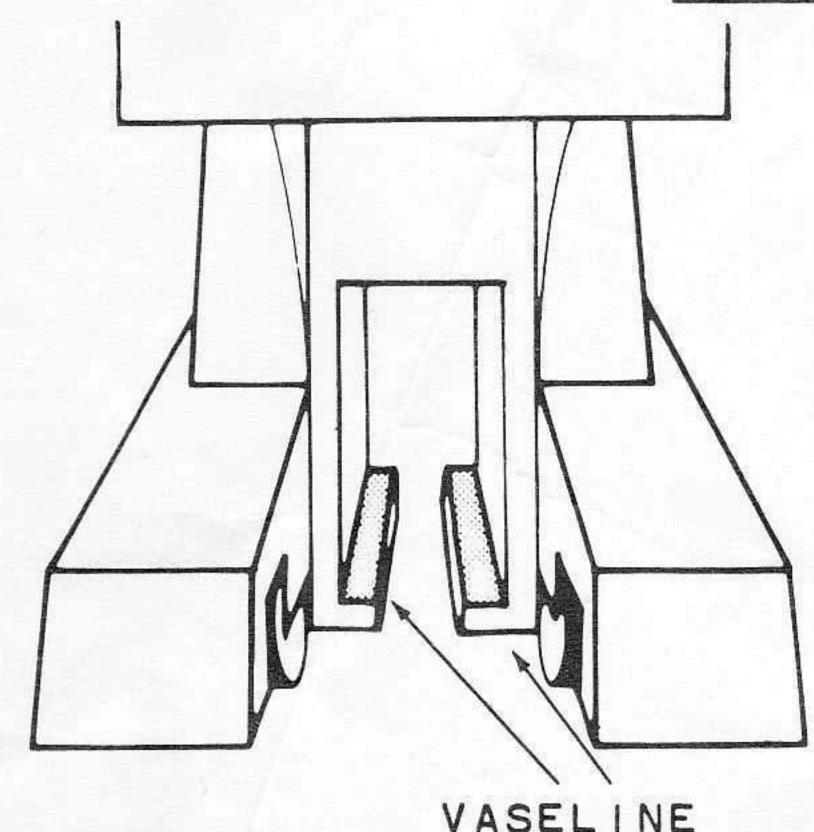

FOR BEST RESULTS ON SPACE SKYWAY SETS, PUT A SMALL AMOUNT OF VASELINE® ALL ALONG LEDGES BETWEEN DING-A-LING'S FEET, AS SHOWN. BE SURE TO ADD MORE VASELINE WHEN NEEDED.


VASELINE

@1971 TOPPER CORPORATION, ELIZABETH, N.J. 07206

ONG FIREMAN INSTRUCTION SHEET

DO NOT THROW THIS SHEET AWAY. READ ALL INSTRUCTIONS CAREFULLY.


HOW TO PLAY WITH YOUR FIREMAN

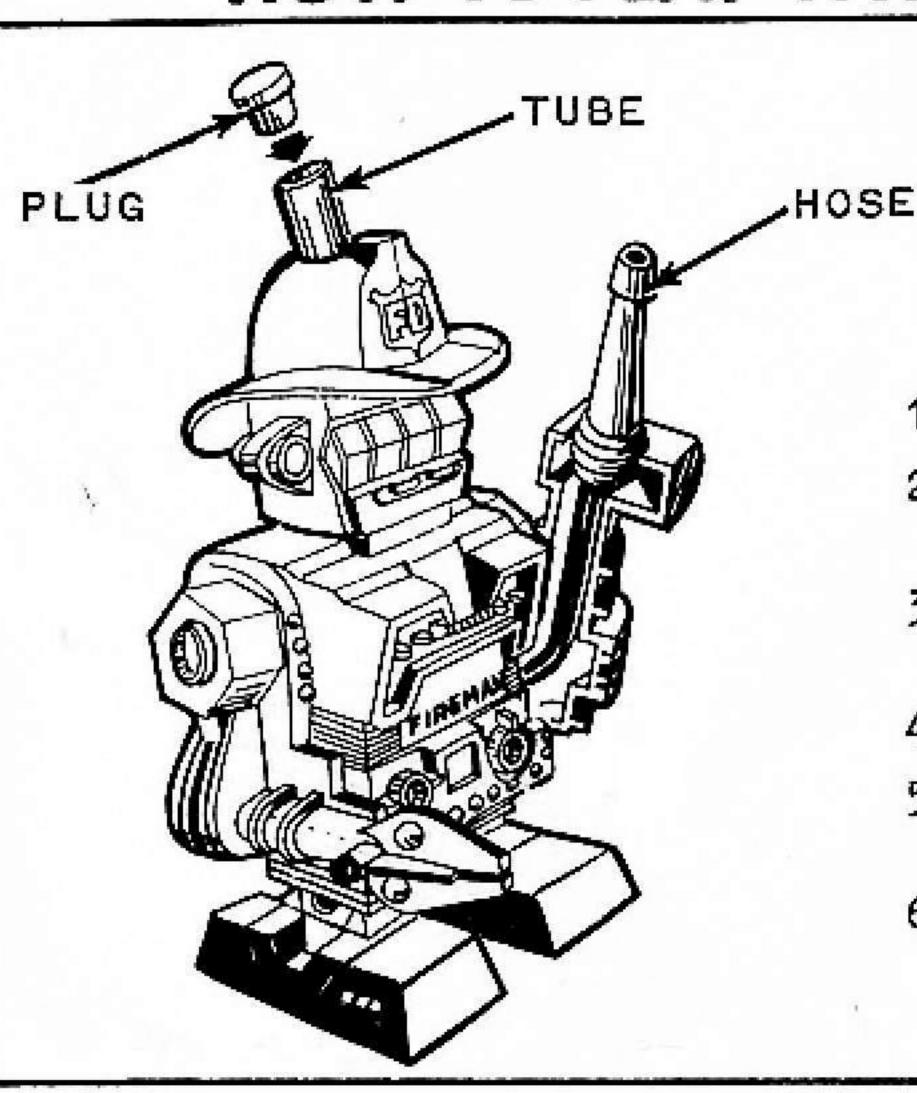

1. REMOVE PLUG.

- 2. MOVE ARM SO THAT HOSE IS POINTING UP, AS SHOWN.
- 3. PUT A LITTLE WATER INTO TUBE IN FIREMAN'S HAT.
- 4. HOLD TUBE FIRMLY AND REPLACE PLUG.
- 5. MOVE HOSE ARM DOWN TO FIREMAN'S SIDE.
- 6. PRESS THE PLUG ON HIS HAT AND WATER WILL SQUIRT FROM THE HOSE.

IMPORTANT

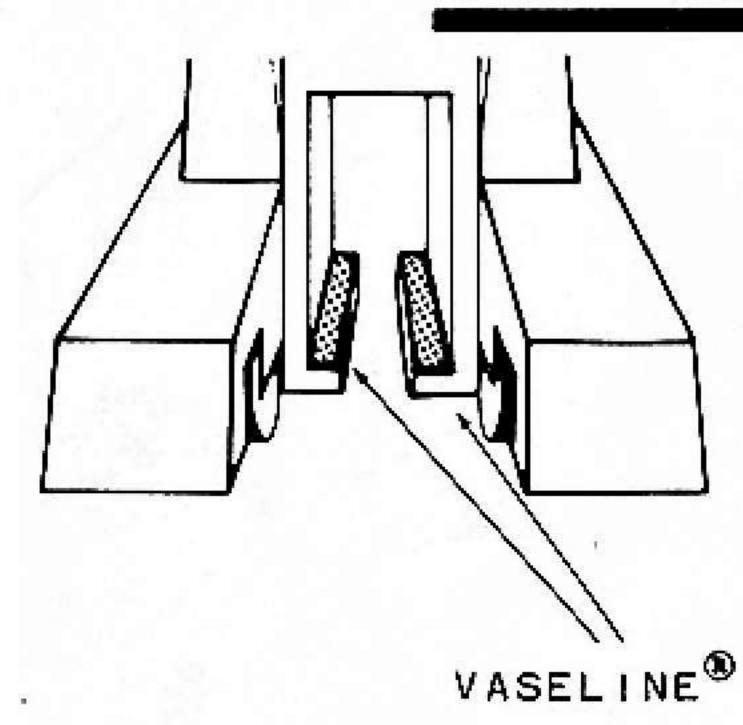

FOR BEST RESULTS ON SPACE SKYWAY SETS, PUT A SMALL AMOUNT OF VASELINE®ALL ALONG LEDGES BETWEEN DING-A-LING'S FEET, AS SHOWN.
BE SURE TO ADD MORE VASELINE®WHEN NEEDED.

CAUTION

WHEN PUTTING POWER PACK INTO FIREMAN, BE SURE HOSE INSIDE HIS BODY IS PUSHED ALL THE WAY BACK.




© 1971 TOPPER CORPORATION, ELIZABETH, N.J. 07206

ONG ROCKY INSTRUCTION SHEET


. DO NOT THROW THIS SHEET AWAY. READ ALL INSTRUCTIONS CAREFULLY.

HOW TO LOAD ROCKETS

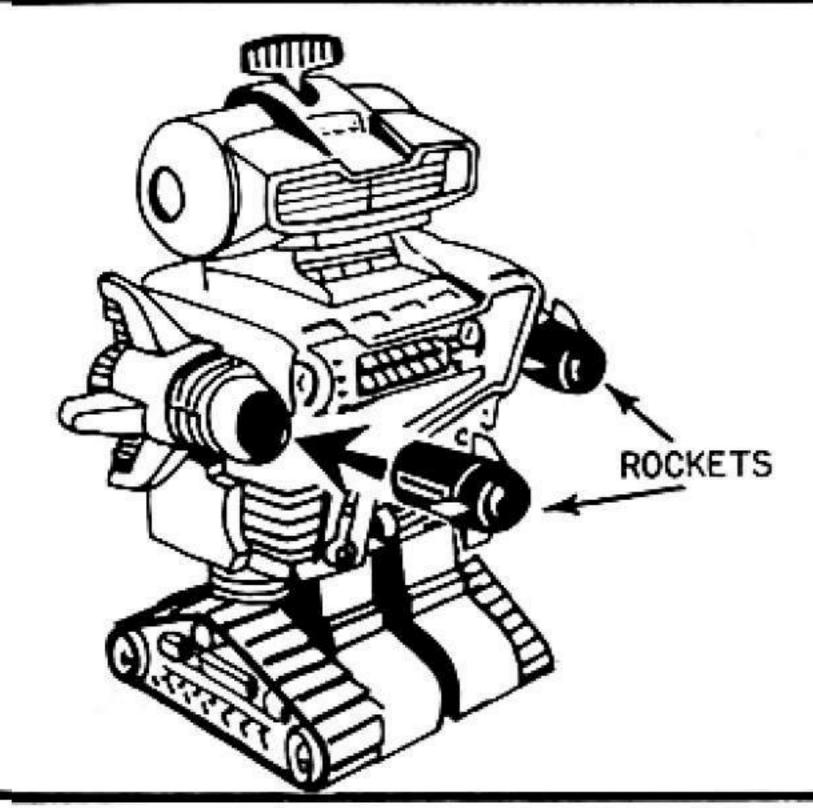


PUSH ROCKETS ALL THE WAY INTO HOLES.

HOW TO PLAY WITH ROCKY

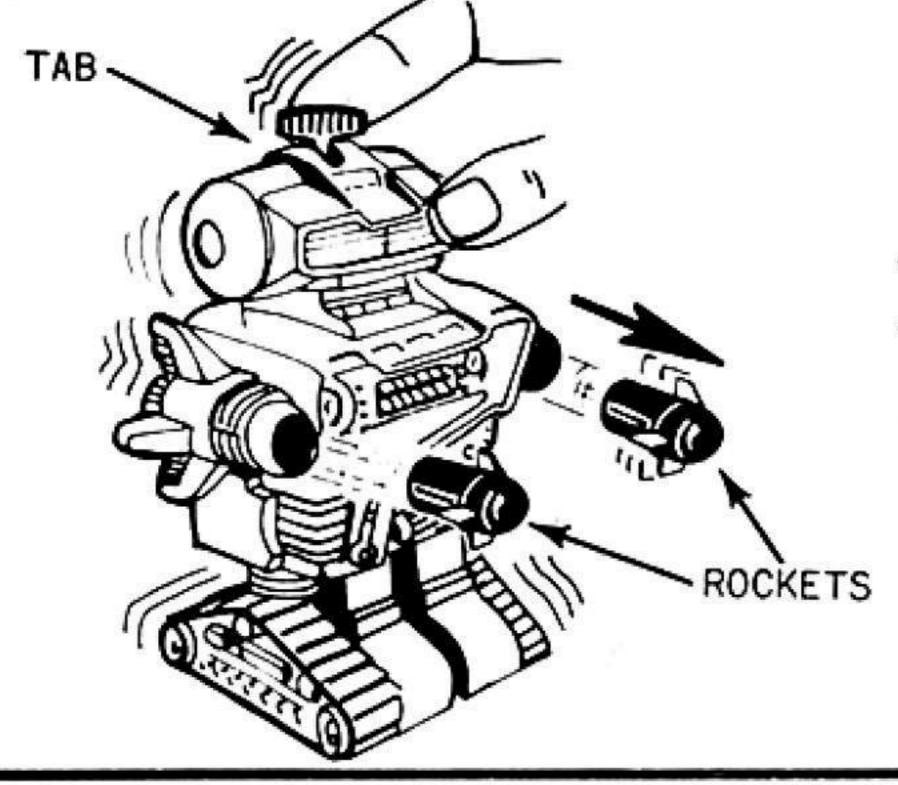

TO SHOOT ROCKETS, PUSH
TAB ON ROCKY'S HEAD FORWARD
AS SHOWN.

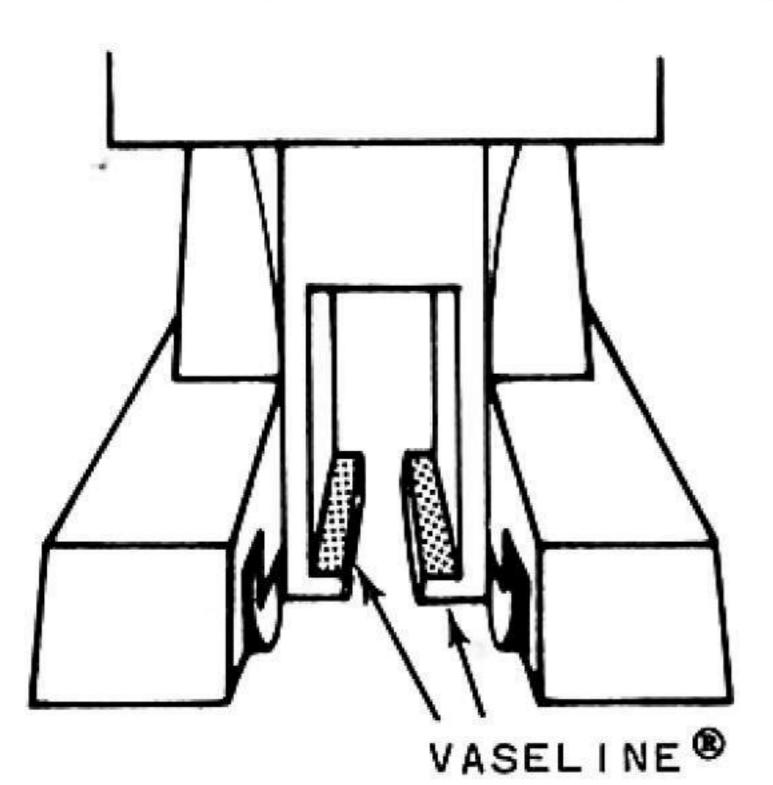

<u>IMPORTANT</u>

FOR BEST RESULTS ON SPACE SKYWAY SETS, PUT A SMALL AMOUNT OF VASELINE® ALL ALONG LEDGES BETWEEN DING-A-LING'S FEET, AS SHOWN.


BE SURE TO ADD MORE VASELINE® WHEN NEEDED.

(Eister)

●@1971 TOPPER CORPORATION, ELIZABETH, N.J. 07206


HOW TO JOIN DING-A-LINGMOBILE TO DING-A-LING SPACE SKYWAY SETS (SOLD SEPARATELY)

IF YOU HAVE THE STRAIGHT SPACE SKYWAY:

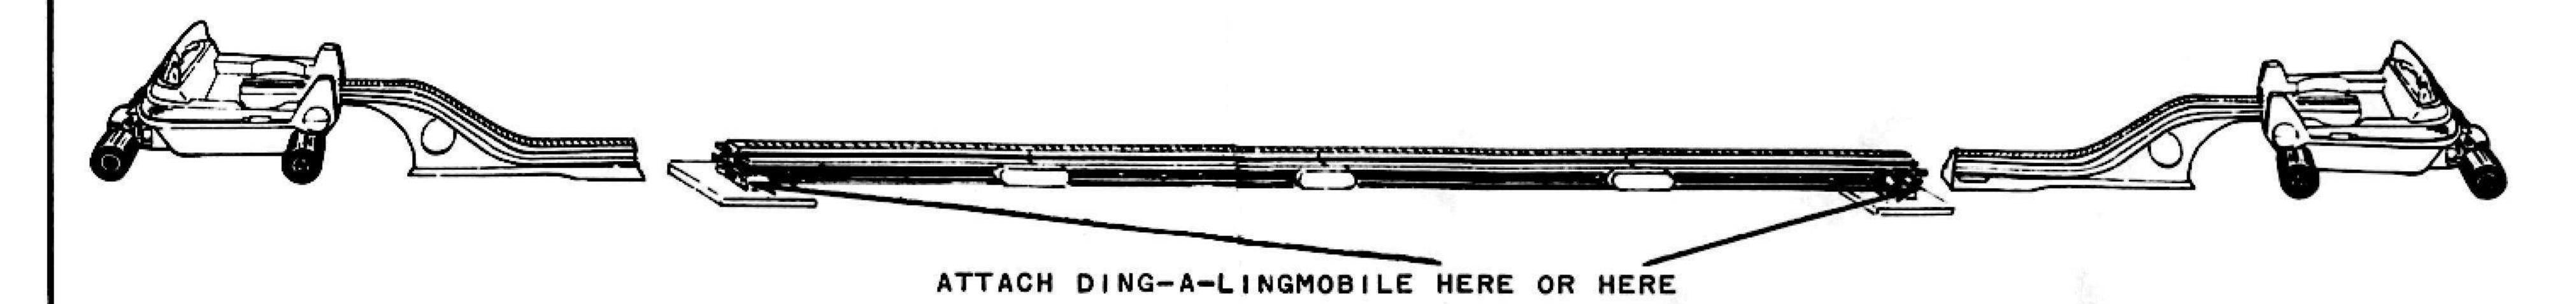


ATTACH ASSEMBLED DING-A-LINGMOBILE TO EITHER END OF STRAIGHT SPACE SKYWAY.



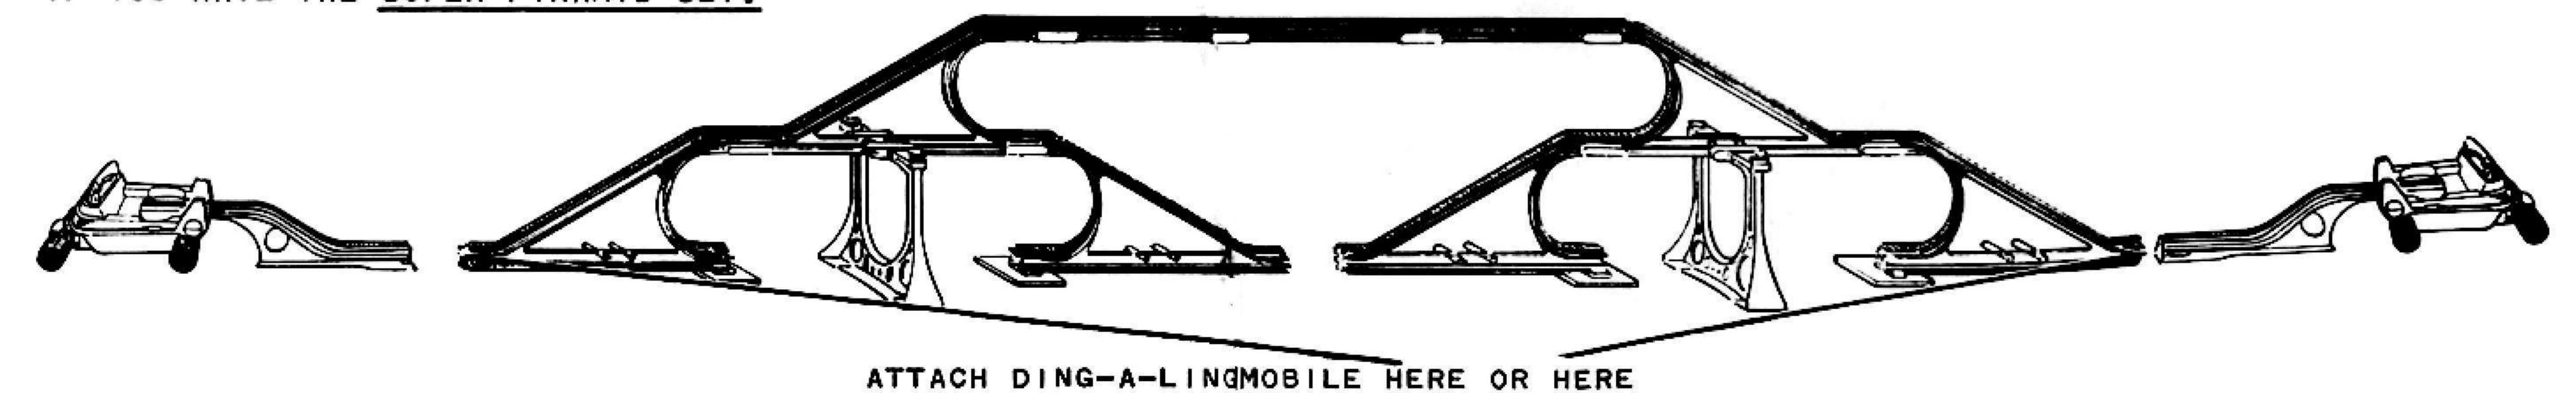

ATTACH ASSEMBLED DING-A-LINGMOBILE TO EITHER END OF SUPER PYRAMID SET.

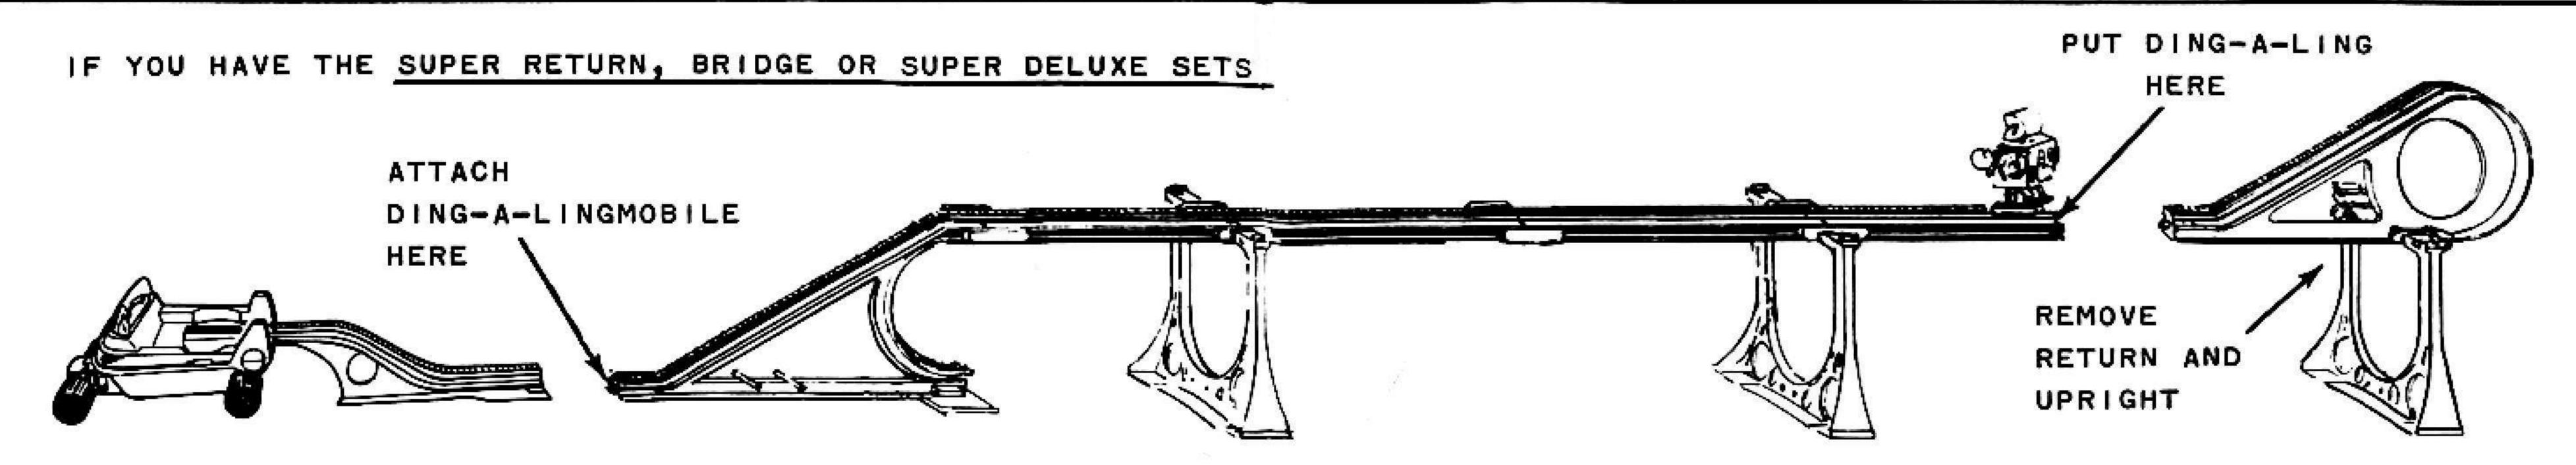

THE SUPER RETURN SET, BRIDGE SET AND SUPER DELUXE SET ALL HAVE SECTIONS WITH RETURNS AND UPRIGHTS. ALWAYS REMOVE RETURNS AND UPRIGHTS AND PUT DING-A-LING ONTO STRAIGHT PIECE AS SHOWN ABOVE.

€TOPPED À

●1971 TOPPER CORPORATION, ELIZABETH, N.J. 07206