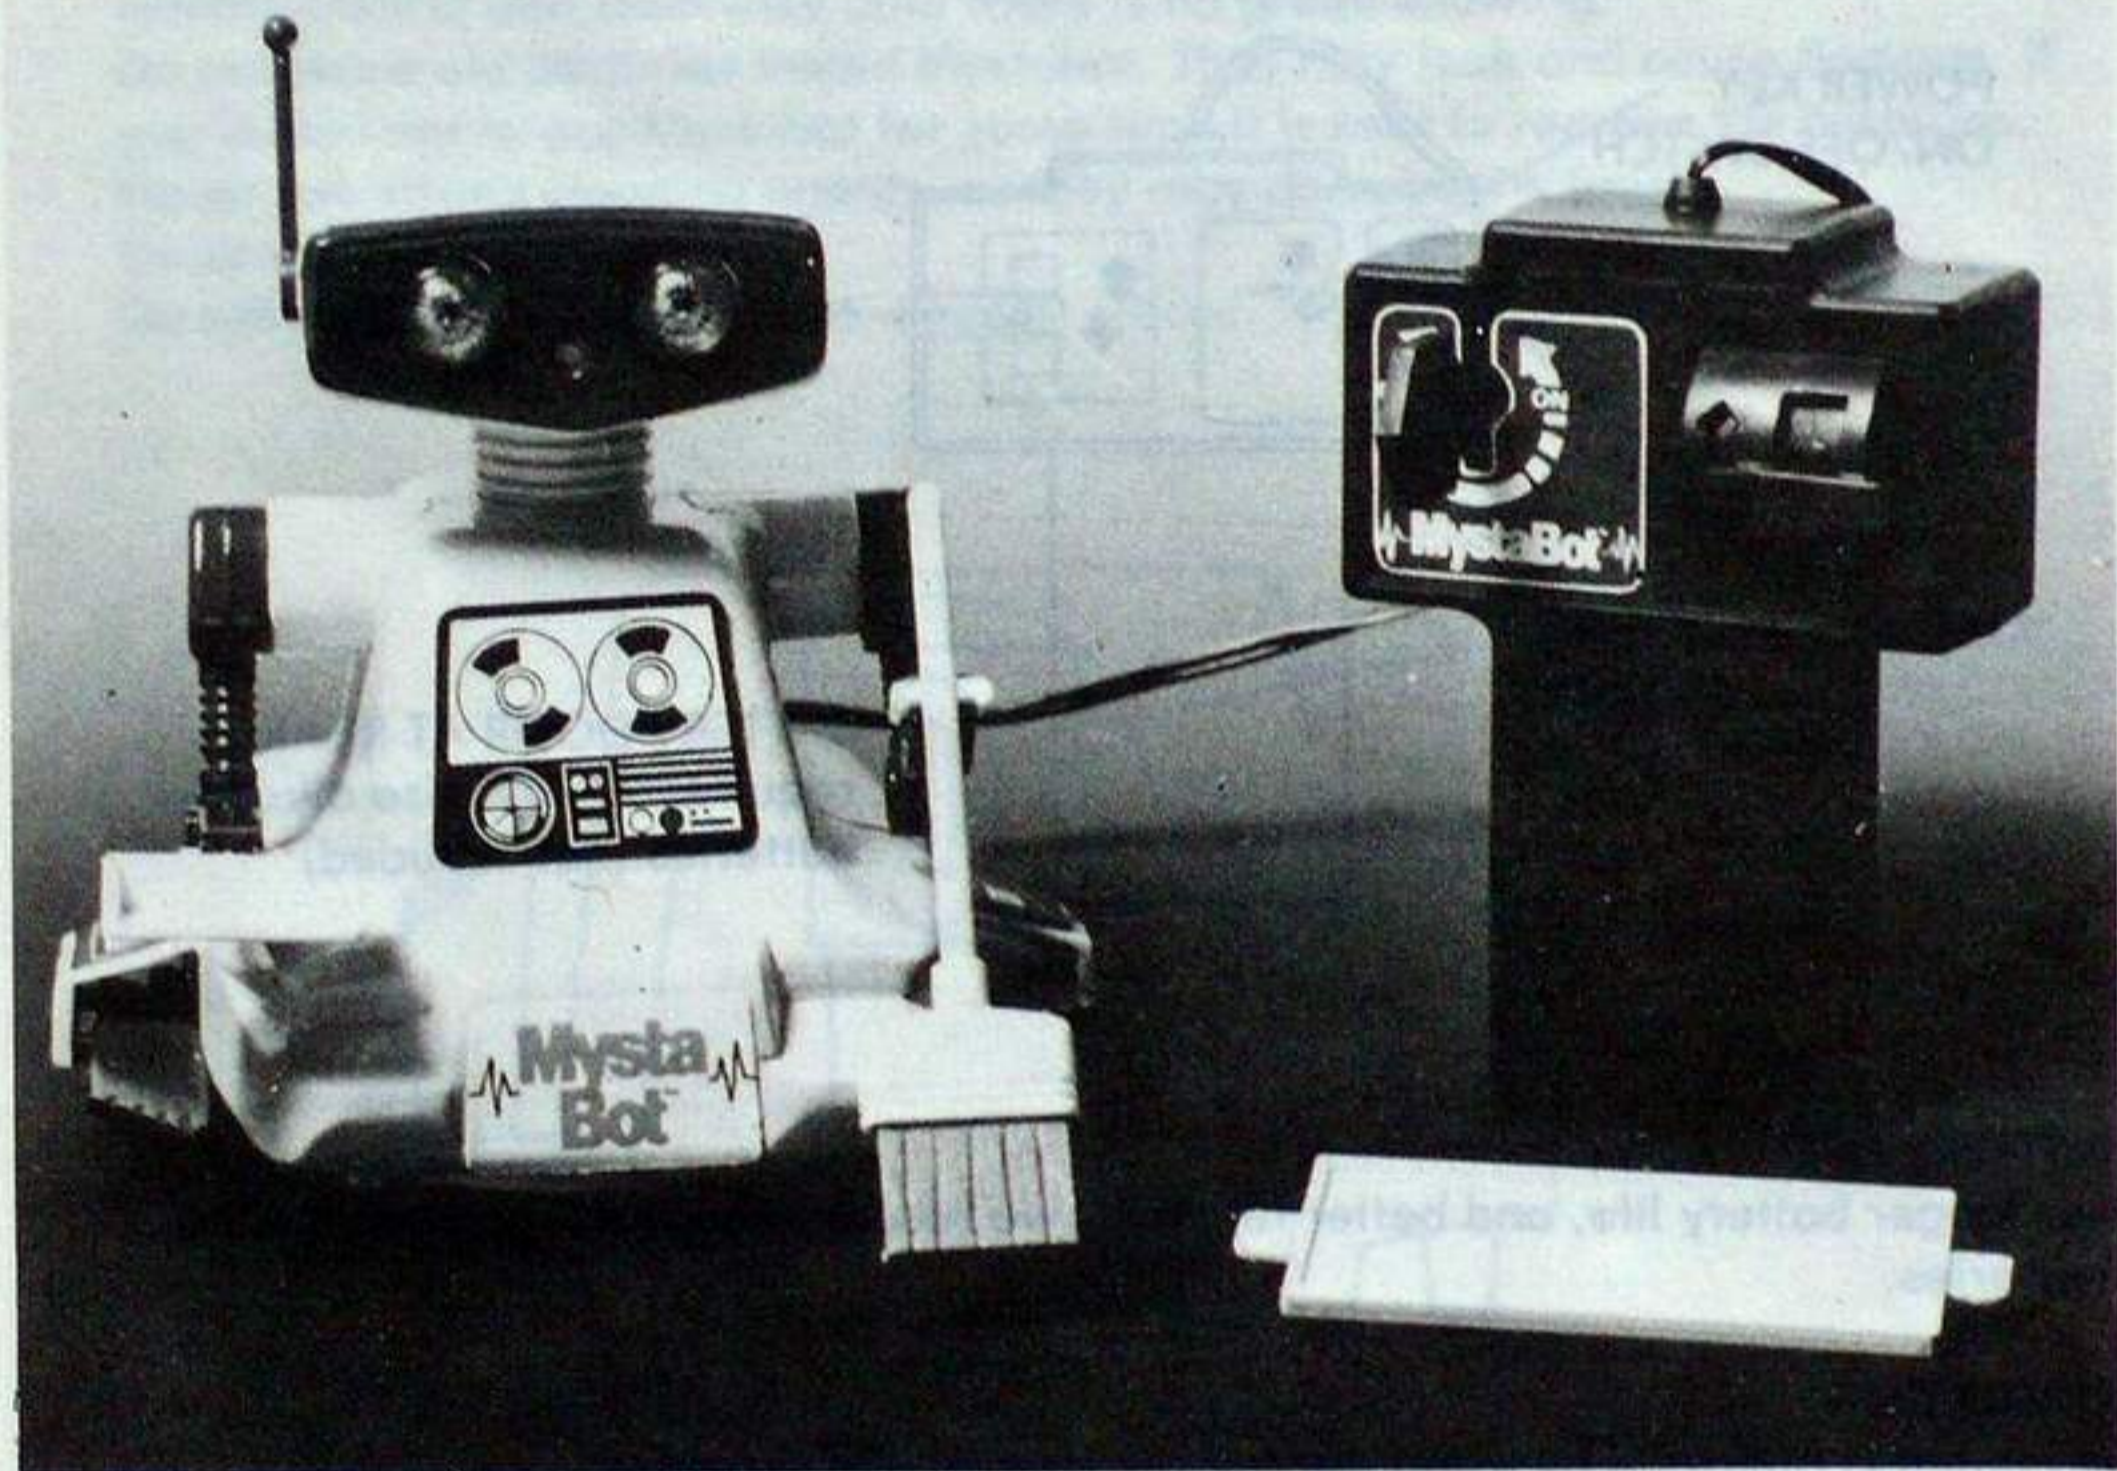

No. 711800

Remote Control Mystabot (Male/Female)

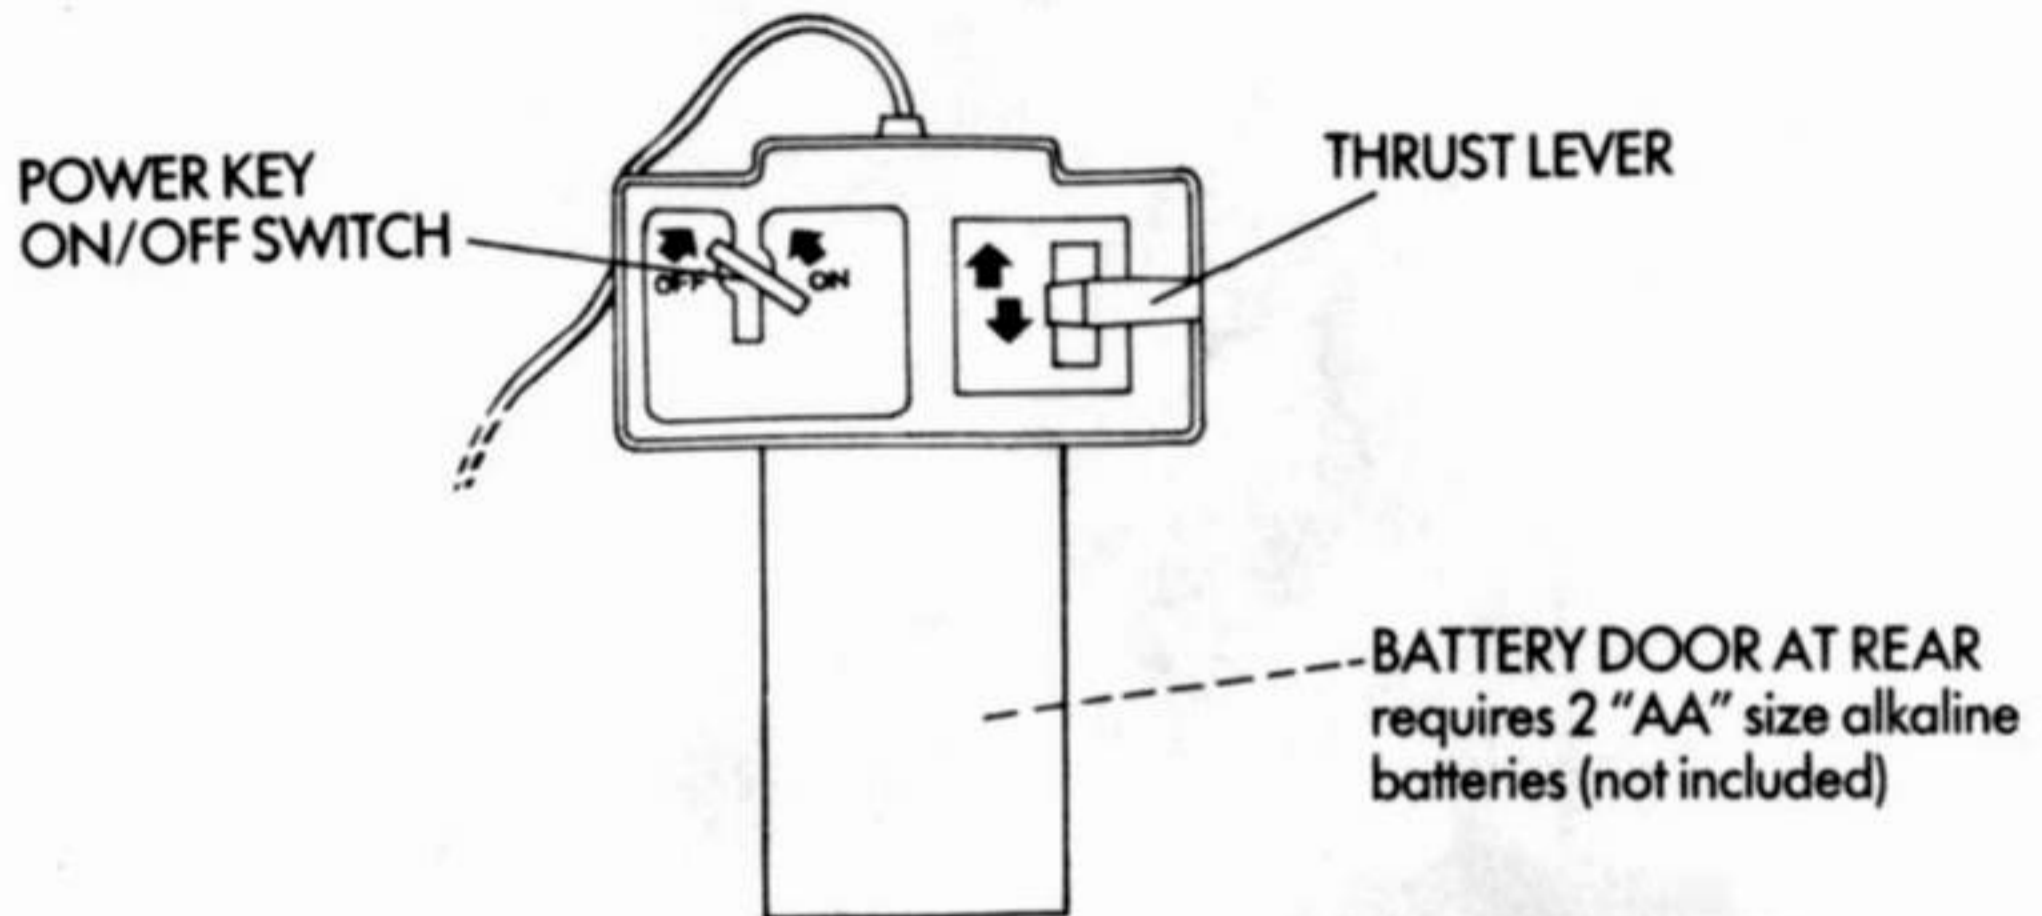


- * **Straight Line Forward Motion**
- * **Turns in reverse**
- * **Key lock function**
- * **Eyes Light-up**
- * **Accessories included**
- * **Requires 2 'AA' size alkaline batteries (not included)**

BATTERY INSTALLATION

Mystabot is powered by 2 standard "AA" batteries (not included), which fits into the remote control unit. To insert:

- Open the battery cover by sliding in the direction of the arrow
- Insert battery, observing correct polarity
- Close the cover by sliding back into the original position



BATTERY LIFE

For longer battery life, and better function, we recommend that you use alkaline batteries.

OPERATION

Mystabot is operated by using the remote control unit provided.

- To turn the robot on first turn the key on the remote control unit anticlockwise until the green colour is showing
- Forward/Reverse Action: To make **Mystabot** go forward, push the thrust lever on the remote control unit forward. For reverse just pull the lever back.
- **Mystabot** eyes light up whenever you operate the thrust lever.
- **Mystabot** works best on a smooth surface.

CARE AND MAINTENANCE

- When not using **Mystabot** sure to turn the power off by turning the key on the remote control unit clockwise until there is no green showing.
- Do not leave old batteries inside **Mystabot**. They may leak and cause damage. If you intend not to use **Mystabot** for some time it is best to remove the batteries.
- Never use strong cleaning agents, as they may damage the finish.
- Do not let **Mystabot** get wet.
- Do not store in excessively hot, or cold, places.

ALL RIGHTS RESERVED

© 1988 Playtime Products Inc., New York, NY 10010 USA

MADE IN CHINA