

# RS MEDIA™

A FUSION OF TECHNOLOGY AND PERSONALITY



## User Manual

North America

Item No. 8061 | Ages 8+

**WowWee**  
Robotics™



### CAUTION - ELECTRICAL TOY:

NOT RECOMMENDED FOR CHILDREN UNDER 4 YEARS OF AGE. AS WITH ALL ELECTRICAL PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRICAL SHOCK. INPUT: AC100-240V, 50/60HZ OUTPUT: DC 7.5V 3.1A





## **COPYRIGHT INFORMATION**

RS Media™, Robosapien™, Robosapien™ V2, Roboreptile™, Robopet™, and Roboraptor™ are copyright and trademarked by Wowwee Ltd.

Sun Microsystems and Java are registered trademarks of Sun Microsystems, Inc.

All other copyrights are hereby acknowledged.

## **SYSTEM REQUIREMENTS**

Minimum system requirements for running RS Media Editing Suite.

Microsoft® Windows® XP SP2 or higher (English Edition)  
(Compatible with German, Spanish, French, and Italian  
Windows® XP SP2 or higher)

PC with PIII 1.5GHz equivalent or higher processor

256 MB of system RAM

16 MB video card recommended

200 MB available hard disk space

CD-ROM drive

Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via Internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like) or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required.

For details, please visit <http://mp3licensing.com>.

**Congratulations on choosing RS Media™, the next generation of Robosapien technology and personality.**




RS Media is a complete multimedia robotic experience with the unique ability to be fully customized. The perfect fusion of cutting-edge technology and personality modeling software, RS Media allows you to take total control.

Before using this product, take a few moments to read this manual and retain it for future reference.

## Package contents

This package contains:

- 1 x RS Media
- 1 x Controller
- 1 x USB Cable
- 1 x CD RS Media software
- 1 x AC/DC power adapter

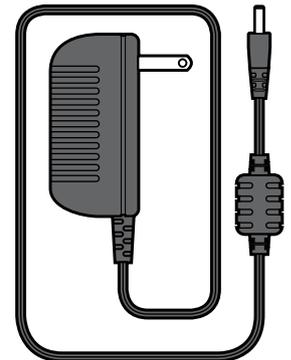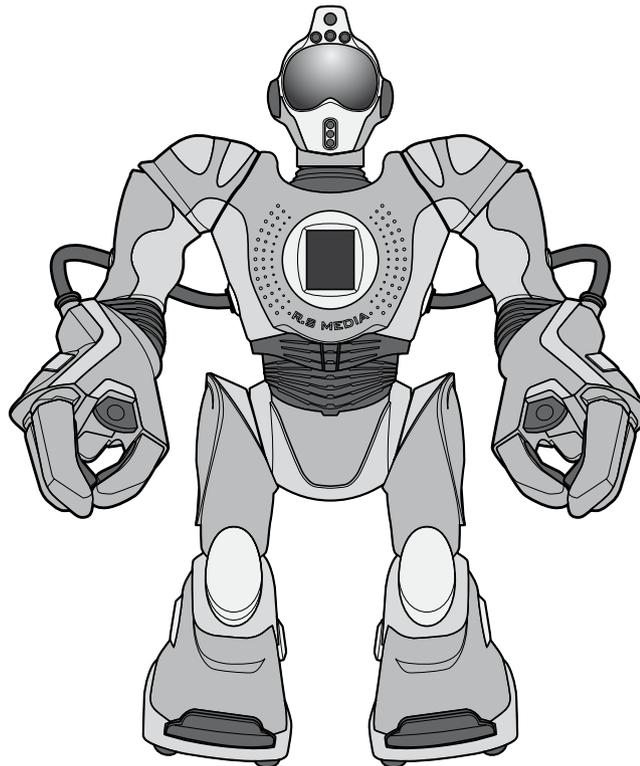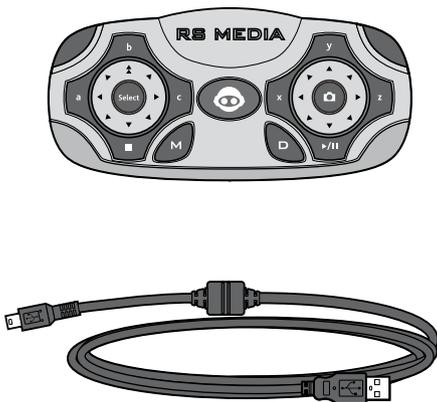

# CONTENTS

<b>Welcome</b>	<b>3</b>	<b>Photo menu</b>	<b>29</b>
<b>Quick start</b>	<b>6-7</b>	<b>Photo controls chart</b>	<b>30</b>
<b>Power and Battery details</b>	<b>8-9</b>	<b>Video menu</b>	<b>31</b>
<b>RS Media overview</b>	<b>10</b>	<b>Video controls chart</b>	<b>32</b>
<b>LCD screen</b>	<b>11</b>	<b>Personality menu</b>	<b>33</b>
<b>Sensors overview</b>	<b>11</b>	<b>Personality controls chart</b>	<b>33</b>
<b>RS Media basics</b>	<b>11</b>	<b>Games menu</b>	<b>34</b>
<b>Sleep mode and power down</b>	<b>11</b>	<b>Games controls overview</b>	<b>34</b>
<b>Basic movements</b>	<b>12</b>	<b>Description of games</b>	<b>35</b>
<b>Basic arm movements</b>	<b>13</b>	<b>Ghost Force</b>	<b>35</b>
<b>Basic media mode functions</b>	<b>13</b>	<b>Vortex Racer</b>	<b>36</b>
<b>Remote controller overview</b>	<b>14</b>	<b>Bubble Soccer</b>	<b>36</b>
<b>Hand controls basics</b>	<b>15</b>	<b>Options menu</b>	<b>37</b>
<b>Introduction to RS Media's modes</b>	<b>16</b>	<b>Media mode mapping chart</b>	<b>38-41</b>
<b>Description of Control mode</b>	<b>16</b>	<b>Sonic sensors</b>	<b>42</b>
<b>Control mode mapping chart</b>	<b>16-19</b>	<b>Tilt sensors</b>	<b>42</b>
<b>Description of Arm mode</b>	<b>20</b>	<b>Grip sensors</b>	<b>42</b>
<b>Arm mode mapping chart</b>	<b>20-23</b>	<b>Foot sensors</b>	<b>42</b>
<b>Description of Media mode</b>	<b>24</b>	<b>Infrared vision systems</b>	<b>43</b>
<b>Media mode functions overview</b>	<b>25</b>	<b>Flinch response</b>	<b>43</b>
<b>Hand controls</b>	<b>25</b>	<b>Long-range infrared vision</b>	<b>43</b>
<b>Media format compatibility</b>	<b>26</b>	<b>Close-range infrared vision</b>	<b>43</b>
<b>Descriptions of Media mode menus</b>	<b>27</b>	<b>Obstacle avoidance</b>	<b>44</b>
<b>Audio controls chart</b>	<b>28</b>	<b>Color recognition</b>	<b>44</b>


Identifying and tracking	44	Installing the software	51
Tracking timeout	44	Running the software	51
Object disappears	44	Software overview	51
Still objects	44	Help file	52
Color camera settings	45	Personality editor overview	52
Blinking	45	Macro editor overview	52
Blinking in Programming modes	45	BodyCon editor overview	53
Guard Mode	45	Media Organizer overview	53
RS Media™ / Robosapien™ V2 interaction	46	Onboard memory vs. expandable memory	54
Roboreptile™ interaction	46	Using the SD card	54
Roboraptor™ interaction	46	USB Connection	54
Robopet™ interaction	47	Playing audio from an external source	55
Advanced interaction with RS Media	47	Caring for your RS Media	55-56
Programming capability	47	Glossary	56
Directly programming RS Media	47	Warranty information	57
Puppet Mode (Positional programming)	48	FAQs	57
Puppet Mode: Foot sensors	48	Support	57
Puppet Mode: Left and Right side programming	48	Index	58
Main Program Mode	49		
Subroutines	49		
Sound and Vision subroutines	49		
Positional subroutines	50		
Guard subroutine	50		
Introduction to the RS Media Editing Suite	51		

---


# QUICK START

To sample some of RS Media's functions immediately, insert his batteries (see p.8-9) turn him on (see p.11) and follow this brief overview of some of his functions in each Mode.

See page 14 for full details of controller button symbols used throughout this manual.

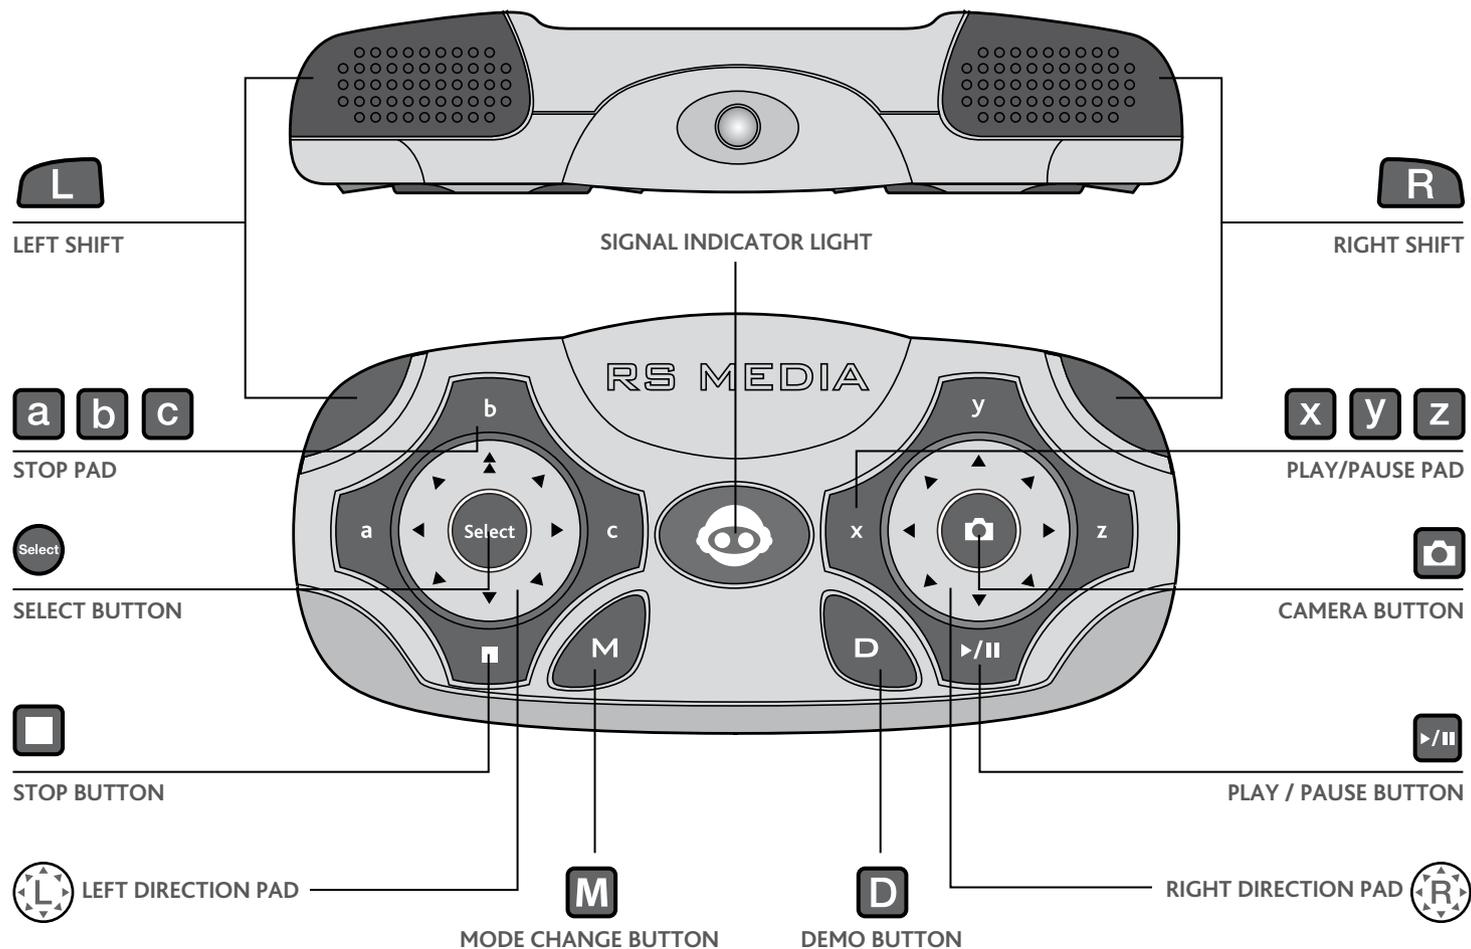

Mode selection. Press **M** to cycle through RS Media's three modes.

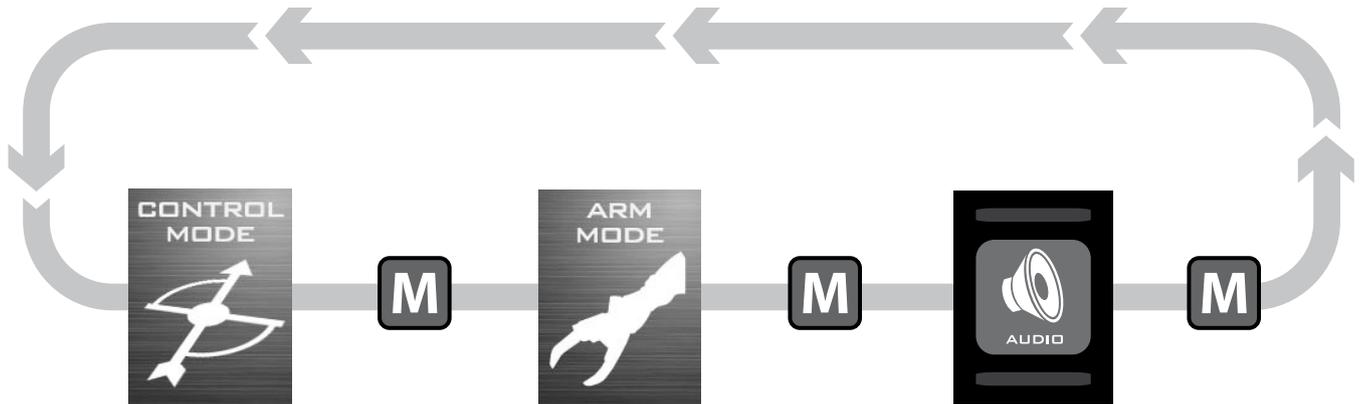

CONTROL MODE - CONTROLLER LEVEL 1	
Stop	
Dance Demo	
Movement	
Head & Upper Body	
Change Personality	
Free Roam Toggle	
Upper Body Only	+
Personality Demo	+
Lie/Sit/Get up	+
Guard Mode	+
Sleep/Power down	+

ARM MODE - CONTROLLER LEVEL 2	
Right Arm	
Left Arm	
Left/Right Arm Drop	/
Left/Right Arm Grab	/
Left/Right Arm Throw	/
Left/Right Arm Chop	+  /
Left/Right Arm Pick up	+  /
Left/Right Arm Roll	+  /
Left/Right Arm Place	+  /
Left/Right Arm High Pick Up	+  /
Left/Right Arm Push	+  /

MEDIA MODE - CONTROLLER LEVEL 3	
Menu Navigation	
Menu Select	
Volume Up & Down	
Play / Pause Media	
Previous Track	
Next Track	
Take Photo	
Track & Photo Human	
Game Menu	
Media Menu	+
Media Demo	+

# POWER AND BATTERY DETAILS

This section describes the battery and power requirements for RS Media. RS Media tells you when his batteries are running low, after which he will shut down. When he does this, you will need to replace all the batteries in the robot.

If RS Media is not responding well to controller commands, you might need to replace the batteries in the controller.

## RS Media

### Battery requirements

Your RS Media is powered by 6 x "D" size batteries (not included) and 4 x "AA" size batteries (not included). We recommend using only top-quality alkaline batteries.

### Power adapter

RS Media can be powered by an Output 7.5V AC/DC, 3.1 Amp, center-positive adapter.

**NOTE: Before operating RS Media using an adapter, make sure that RS Media is turned off (button is set to the OFF position).**

To operate RS Media using an adapter:

1. Insert the jack of the adapter into the AC/DC socket in RS Media's right foot (see RS Media Overview p.10)
2. Plug the adapter into a wall socket.
3. Turn RS Media on by setting the power button to the ON position.

**NOTE: RS Media will only perform upper body and media functions (i.e. he will not perform any leg actions or bend at the waist) when being powered by an adapter.**

### Important power adapter information

Examine the AC/DC adapter regularly for damage to the cord, plug, enclosure and other parts.

The AC/DC adapter is not a toy.

The toy must only be used with the recommended transformer.

If you wish to clean RS Media ensure that the power is disconnected first.


Wipe only with a soft dry cloth.

## Battery installation

**NOTE: Before installing or changing batteries, makes sure that RS Media is turned off (switch is set to the OFF position).**


To install or change batteries in RS Media:

1. On RS Media, locate the battery compartments (on the underside of each foot).
2. Using a Phillips screwdriver (not included), remove the battery compartment covers.
3. Insert batteries into the RS Media battery compartments as illustrated in the diagram.
4. Replace the battery compartment covers and then replace the screws.

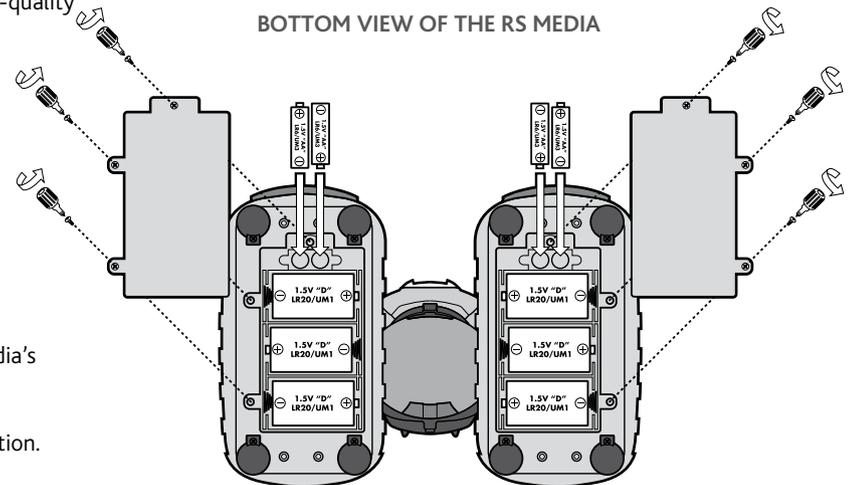

BOTTOM VIEW OF THE RS MEDIA

AC/DC ADAPTER INPUT

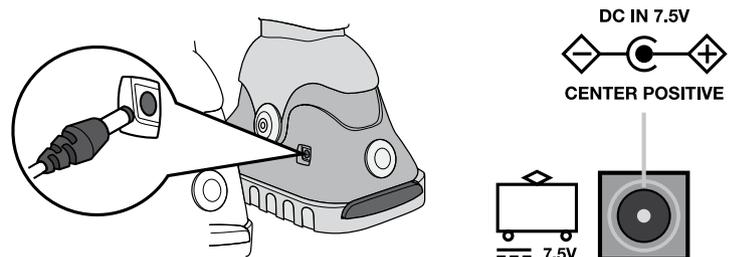

## RS Media remote controller

### Battery requirements

Your RS Media remote controller is powered by 3 x "AA" size batteries (not included). We recommend using only top-quality alkaline batteries.

### Battery installation


To install or change batteries in RS Media remote controller:

1. Locate the battery compartment on the underside of the remote controller.
2. Using a Phillips screwdriver (not included), remove the battery compartment cover.
3. Insert batteries into the remote controller as illustrated in the diagram.
4. Replace the battery compartment covers and then replace the screw.

### Important battery information

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries [standard (Carbon-Zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Rechargeable batteries are only to be charged under adult supervision.
- Respect the correct polarity, (+) and (-) as indicated.
- Do not try to recharge non-rechargeable batteries.
- Do not dispose of batteries in fire. Batteries might explode or leak.
- Do not use different type/brand of batteries at the same time.
- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults.
- Remove batteries if the toy is not going to be played with for some time.
- The packaging should be kept since it contains important information.
- Rechargeable batteries are to be removed from RS Media and the controller before being charged.

BACK VIEW OF THE CONTROLLER

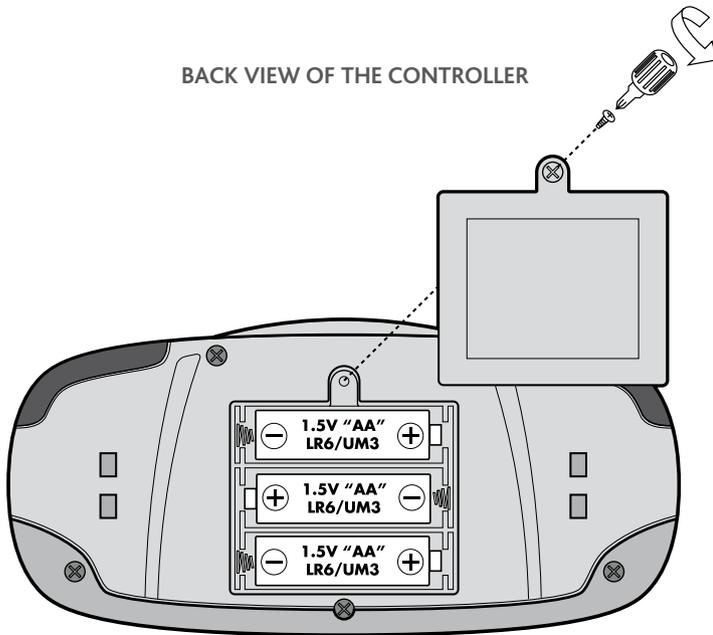

# RS MEDIA OVERVIEW

RS Media is equipped with a multitude of features that really makes him a multi-media experience contained in a robot. Refer to the illustration for an overview of his features.

## IR VISION SENSORS AND CAMERA EYES

EYES

SONIC SENSOR

LCD SCREEN

RIGHT HAND SPEAKER

LEFT HAND SPEAKER

HAND CONTROLS

SD CARD COMPARTMENT

LINE IN / USB COMPARTMENT


WOOFER

ON/OFF BUTTON

BACK FOOT SENSORS

AC/DC POWER POINT

FRONT FOOT SENSORS

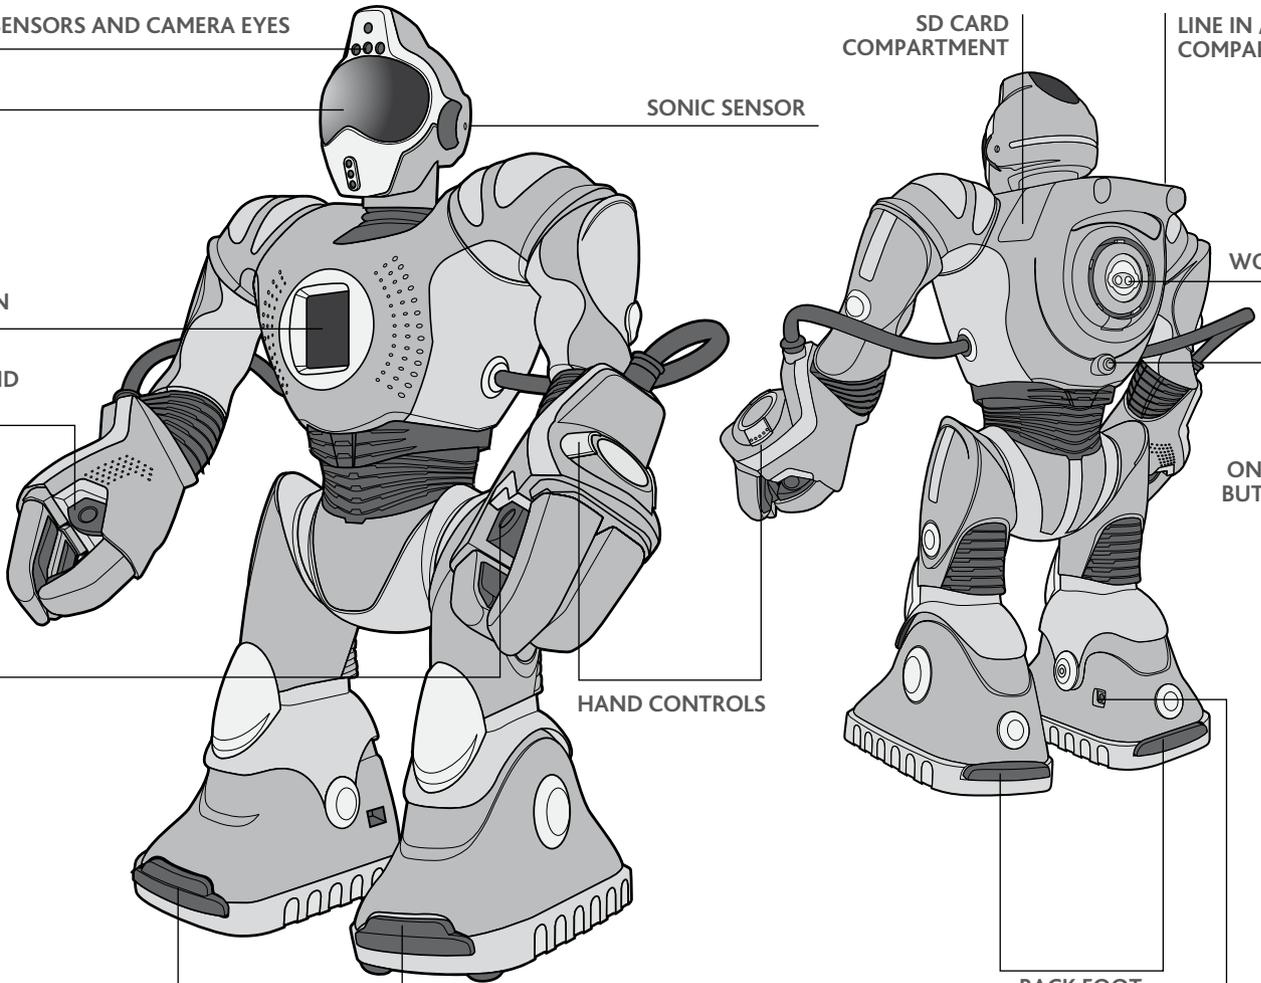

## LCD screen

In addition to RS Media's status, the LCD screen located on RS Media's chest is used to display media files such as photos, videos, and MP3 file information. Refer to page 56 for information on caring for the LCD screen.

## Sensors overview

RS Media is equipped with numerous types of sensors. He has sonic sensors, infrared sensors, tilt sensors, grip sensors, and foot sensors. He is also equipped with comprehensive vision systems. See the section RS Media's sensors on page 42.

## RS Media basics

### Basic powering functions

This section describes the basic RS Media functions, such as power functions and sleep functions.

### Powering ON/OFF

RS Media's power button is located on his back, just below the woofer, as illustrated. To turn RS Media on, press the power button to set it to the ON position; to turn him off, press the power button to set it in the OFF position.

**NOTE:** Wait 5 seconds after turning RS Media off before turning him back on again.

During the boot up sequence, RS Media displays a Wowwee splash screen on his LCD screen, which cannot be interrupted. Once powered on, the robot goes into Control mode.



You can cycle through three different modes on RS Media using the remote controller's Mode button. The different modes are described in detail in the chapter Interacting with RS Media.


## Sleep mode and Power down

RS Media conserves power using Sleep mode and Power down.

- **Sleep mode.** In Sleep mode, the backlight on RS Media's LCD screen will turn off after about 2 minutes of inactivity to conserve power. RS Media will wake up as soon as he receives a command from the remote controller.
- **Power down.** RS Media completely powers down after about 10 minutes of inactivity. You can turn him back on by toggling his power button (setting it to the OFF position, then turning him back on again).

**NOTE:** RS Media will not Power down if he is playing media or being powered by the AC/DC adapter.

**NOTE:** You can also manually put RS Media in Sleep mode or use the Power down function. Refer to Enabling, Disabling, and Resetting RS Media (page 17).

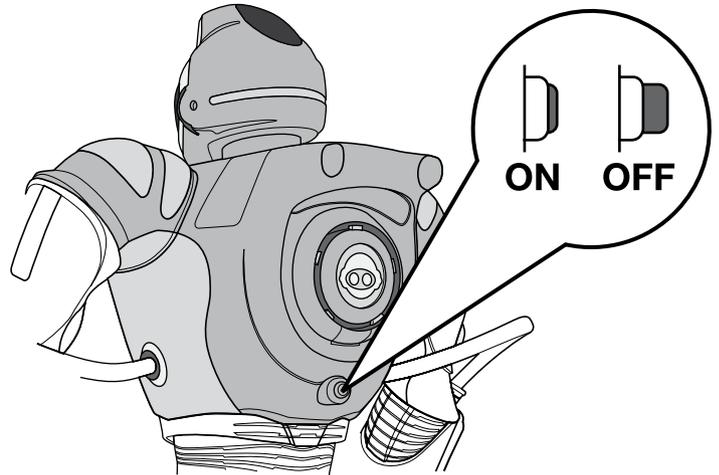

# BASIC MOVEMENTS OVERVIEW

This section describes basic remote controller movement and functions on RS Media.

## Basic movements

This section describes basic movements on RS Media using the remote controller functions.

MODE	BUTTON	NO SHIFT 	LEFT SHIFT 	RIGHT SHIFT 	BOTH SHIFTS 
Control mode		Multi-directional walking: - Forward* - Backward - Left** - Right**	Upper body movement	Bulldozer and Left/Right kick	Move both arms
		Head and upper body movement	Hips and waist movement	Head movement	Move both arms
		Gait control ***/ Quick reset	Lie down/ Sit/ Stand up	Get up	
		Stop / Full reset	Sleep/Power down	Stop all movements	
Arm mode		Right arm movement	Move both arms	Move both arms	Move both arms
		Left arm movement	Move both arms	Move both arms	Move both arms
		Quick reset	Lie down/ Sit/ Stand up	Get up	
		Stop / Full reset	Sleep / Power down	Stop all movements	
			Right wave	Left wave	

\* RS Media has two (2) walking speeds. Press forward on the directional pad while he is walking to toggle between the two walking speeds.

\*\* When you press the left or right on the directional pad in Control mode, RS Media will turn on the spot, that is, he will not perform a walking turn.

\*\*\* RS Media has three (3) walking gaits. Press the Select button while he is walking to toggle between the walking gaits.

# BASIC ARM MOVEMENTS/ BASIC MEDIA MODE FUNCTIONS

## Basic arm movements

This section describes basic arm movements in Arm mode on RS Media using the remote controller.


ARM MODE	BUTTON	NO SHIFT 	LEFT SHIFT 	RIGHT SHIFT 
Right arm		Drop	Chop	Place
		Grab	Low pick up	High pick up
		Throw	Roll	Push
Left arm		Throw	Roll	Push
		Grab	Low pick up	High pick up
		Drop	Chop	Place

## Basic Media mode functions


This section describes basic media functions on RS Media using the remote controller.

MODE	BUTTON COMBINATION	DESCRIPTION
Control mode	 + 	Plays back a sound memo, if one is saved.
	 + 	Records a short sound memo.
	 + 	Records a short video memo.
	 + 	Plays back a short video memo, if one is saved.
All modes		Plays or pauses audio or video file. Hold this button for three (3) seconds to stop media playback.
		Takes a photo.
	 + 	Records a video.

# REMOTE CONTROLLER OVERVIEW

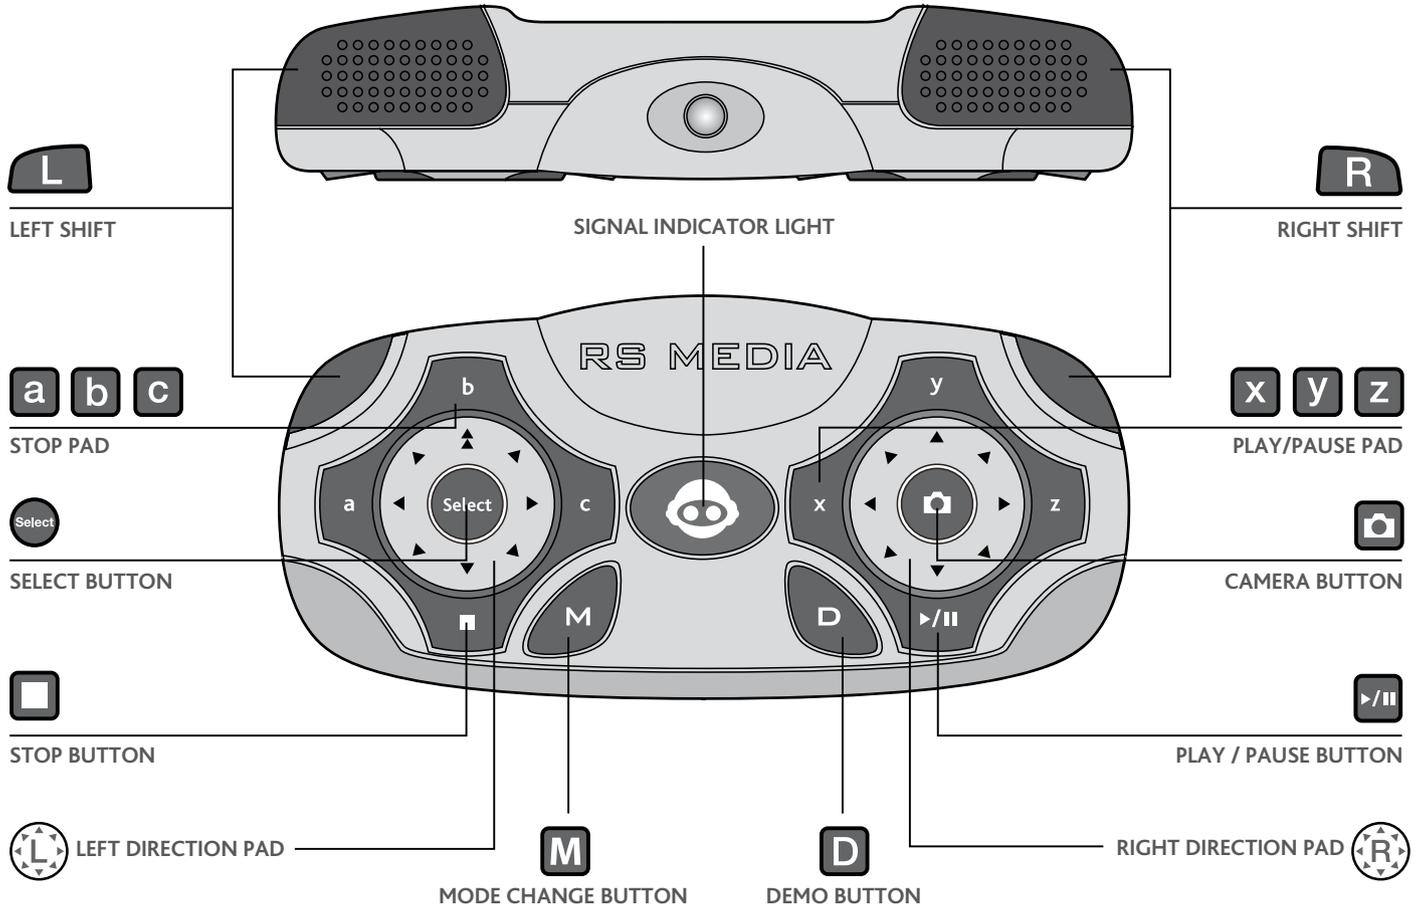

# HAND CONTROLS BASICS

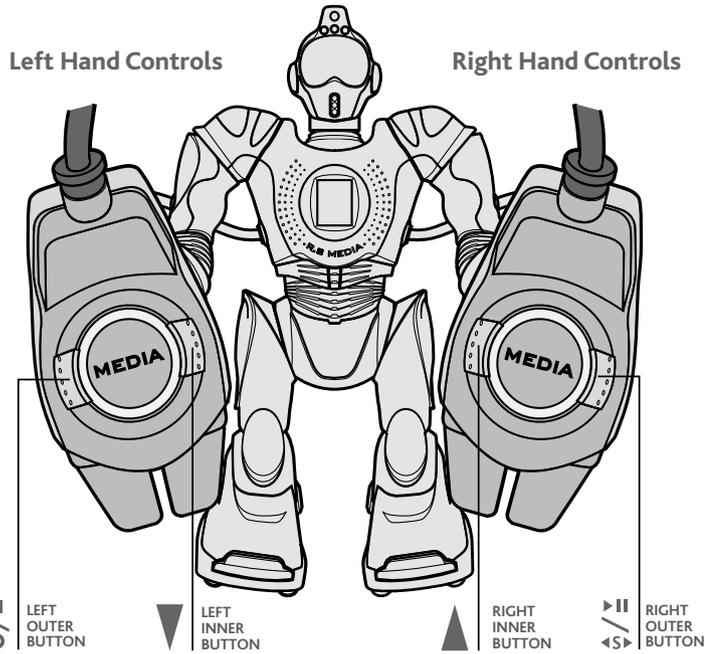

## Hand controls basics

You can use RS Media's hand controls to navigate between modes by pressing the outer buttons simultaneously. Press both outer buttons again to toggle to the next mode.

**NOTE:** In Media Mode, you can use his hand controls to navigate between functions in the on-screen menu or when playing media files.

## HAND CONTROL SPECIFICATIONS - MEDIA MODE ONLY

	Menu Function	Media Playback Function
▼	Left Inner	Scroll Down
▲	Right Inner	Scroll Up
◻ / ↶	Left Outer	Back/exit/stop/play media file (pause if playing)
▶    ◻ / ↷	Right Outer	Play media file (pause if playing)
◻ / ↶    ▶    ◻ / ↷	Both Outer Buttons	Change Mode

**NOTE:** You can hold the UP or DOWN direction on the controller or inner hand controls to make the selection scroll faster.

**NOTE:** When you reach the last item in the menu, the menu will restart with the first item on the list.

# INTERACTING WITH RS MEDIA/ CONTROL MODE MAPPING CHART

This chapter deals with different ways you can interact with RS Media.

## Introduction to RS Media's modes

RS Media is equipped with three modes:

- **Control mode.** Allows you to control his full body movements and functions.
- **Arm mode.** Allows you to control his arm movements and functions.
- **Media mode.** Allows you to access his media and connectivity functions.

 
Refer to the function mapping charts for Control mode and Arm mode on pages 16 to 23.

For the function mapping chart for Media mode, refer to pages 25 to 34.

**NOTE:** The functions in the following function charts that can be programmed are denoted with the Programmable  symbol. Refer to the section Advanced interaction with RS Media for more information on using RS Media's programmable capabilities.

## Description of Control mode

In Control mode, you can control RS Media's body movements and functions using the remote controller or directly on RS Media.

NO SHIFT 		
<b>Movement</b>		Control RS Media's multi-directional walking with the Left Control Pad. 
<b>Head &amp; Upper Body</b>		Control the basic upper body movement with the Right Control Pad. 
<b>Quick Reset</b>		Press to return RS Media to his default standing position, when not walking.
<b>Take Photo</b>		Press twice to make RS Media take a photo. 
<b>Dance Demo</b>		Press to make RS Media perform a dance routine.
<b>Puppet Mode Enter</b>		Press to enter puppet mode programming.
<b>Change Personality</b>		Press to toggle to RS Media's next personality, including those entered by user.
<b>Hearing OFF/ON</b>		Press once to disable RS Media's hearing. Press again to enable RS Media's hearing.
<b>Stop / Full Reset</b>		Press to stop RS Media from performing his current action. Press and hold for about 3 seconds to perform a full reset to default body position. 
<b>Vision OFF/ON</b>		Press once to disable RS Media's vision. Press again to enable RS Media's vision.
<b>Free Roam Toggle</b>		Put RS Media into Free Roam mode so he can explore his environment independently.
<b>Puppet Mode Play</b>		Press to play the main puppet mode program entered into RS Media. 
<b>Play / Pause Media</b>		Press to play or pause the current MP3 or MPEG4.

 = Programmable

# CONTROL MODE MAPPING CHART

LEFT SHIFT 			
Upper Body Only		Control the upper body with the Left Control Pad.	
Hips and Waist		Control the hips and waist with the Right Control Pad.	
Lie / Sit / Get up		With each press, RS Media will toggle through one step in this routine.	
Video Record		Press twice to record a short video. (The second press can be without Left Shift)	
Personality Demo		Press to make RS Media perform a Personality Demo.	
Main Program Enter		Press to enter RS Media's Main Program Mode.	
Clear Entry		Press to clear the last entry made.	
Sound Program Enter		Press to enter RS Media's Sound Program Mode.	
Sleep / Power Down		Press once to make RS Media enter Sleep Mode. Press when already in Sleep Mode and he will Power down.	
Vision Program Enter		Press to enter RS Media's Vision Program Mode.	
Guard Mode		Press to put RS Media into Guard Mode.	
Clear Program		Press to clear the selected Program.	
Main Program Play		Press to play RS Media's Main Program Mode.	

 = Programmable

# CONTROL MODE MAPPING CHART

RIGHT SHIFT 		
<b>Bulldozer &amp; L/R Kicks</b>		Press forwards or backwards and RS Media will Bulldozer in that direction. Press left or right to make RS Media perform a kick with that foot. 
<b>Head Only</b>		Move RS Media's head around using the Right Control Pad. 
<b>Get up</b>		Press to make RS Media stand straight up, whether lying or sitting. 
<b>Take Photo</b>		Press twice to make RS Media take a photo. 
<b>Roboreptile Interaction</b>		Press to initiate an interaction between RS Media and Roboreptile™. 
<b>Sound Memo Playback</b>		Press to play back a Sound Memo track, if one is present. 
<b>Sound Memo Record</b>		Press to record a short Sound Memo track. 
<b>Sound Program Play</b>		Press to play RS Media's Sound Program, if one is present. 
<b>Stop Movement</b>		Press to stop RS Media from performing any movement. Any Media playing will not be affected.
<b>Vision Program Play</b>		Press to play back a Vision Program, if one is present. 
<b>Robot Voice Mute Toggle</b>		Press to toggle between RS Media's robot voice being ON or OFF.
<b>Video Memo Record</b>		Press to record a short Video Memo track. 
<b>Video Memo Playback</b>		Press to play back a Video Memo track, if one is present. 

 = Programmable

# CONTROL MODE MAPPING CHART

 
LEFT & RIGHT SHIFT			
Both Arms		Control RS Media's left and right arms simultaneously	
Both Arms		Control RS Media's left and right arms simultaneously	
User BodyCon 1		User BodyCon / Macro slot	
User BodyCon 2		User BodyCon / Macro slot	
Dance Routine		User BodyCon / Macro slot	
User BodyCon 3		User BodyCon / Macro slot	
User BodyCon 4		User BodyCon / Macro slot	
User BodyCon 5		User BodyCon / Macro slot	
User BodyCon 6		User BodyCon / Macro slot	
User BodyCon 7		User BodyCon / Macro slot	
User BodyCon 8		User BodyCon / Macro slot	
User BodyCon 9		User BodyCon / Macro slot	
User BodyCon 10		User BodyCon / Macro slot	
Media Demo		User BodyCon / Macro slot	

 = Programmable

# ARM MODE MAPPING CHART

## Description of Arm mode

In Arm mode, you can control RS Media's arm movements using the remote controller. For instance, you can make him pick up or throw items.

NO SHIFT 			
Right Arm		Control RS Media's right arm independently	
Left Arm		Control RS Media's left arm independently	
Quick Reset		Press to return RS Media to his default standing position., when not walking.	
Take Photo		Press twice to make RS Media take a photo.	
RSV2 / RS Media Interaction		Press to initiate an interaction between RS Media and Robosapien™ V2, or another RS Media.	
Right Arm Drop		Press to make RS Media perform a Right Arm Drop.	
Right Arm Grab		Press to make RS Media perform a Right Arm Grab.	
Right Arm Throw		Press to make RS Media perform a Right Arm Throw.	
Stop / Full Reset		Press to stop RS Media from performing his current action. Press and hold for about 3 seconds to perform a full reset to default body position.	
Left Arm Throw		Press to make RS Media perform a Left Arm Throw.	
Left Arm Grab		Press to make RS Media perform a Left Arm Grab.	
Left Arm Drop		Press to make RS Media perform a Left Arm Drop	
Play / Pause Media		Press to play or pause the current MP3 or MPEG4.	

 = Programmable

# ARM MODE MAPPING CHART

LEFT SHIFT 			
<b>Both Arms</b>		Control RS Media's arms simultaneously.	
<b>Both Arms</b>		Control RS Media's arms simultaneously.	
<b>Lie / Sit / Get up</b>		With each press, RS Media will toggle through one step in this routine.	
<b>Video Record</b>		Press twice to make RS Media record a short video. (The second press can be without Left Shift)	
<b>Roboraptor Interaction</b>		Press to initiate an interaction between RS Media and Roboraptor™.	
<b>Right Arm Chop</b>		Press to make RS Media perform a Right Arm Chop.	
<b>Right Arm Low Pick Up</b>		Press to make RS Media perform a Right Arm Low Pick up.	
<b>Right Arm Roll</b>		Press to make RS Media perform a Right Arm Roll.	
<b>Sleep / Power Down</b>		Press once to make RS Media enter Sleep Mode. Press when already in Sleep Mode and he will Power down.	
<b>Left Arm Roll</b>		Press to make RS Media perform a Left Arm Roll.	
<b>Left Arm Low Pick Up</b>		Press to make RS Media perform a Left Arm Low Pick Up.	
<b>Left Arm Chop</b>		Press to make RS Media perform a Left Arm Chop.	
<b>Right Wave</b>		Press to make RS Media perform a Right Arm Wave.	

 = Programmable

# ARM MODE MAPPING CHART

RIGHT SHIFT 			
<b>Both Arms</b>		Control RS Media's left and right arms simultaneously.	
<b>Both Arms</b>		Control RS Media's left and right arms simultaneously.	
<b>Get up</b>		Press to make RS Media stand straight up, whether lying or sitting.	
<b>Take Photo</b>		Press twice to make RS Media take a photo.	
<b>Robopet Interaction</b>		Press to initiate an interaction between RS Media and Robopet™.	
<b>Right Arm Place</b>		Press to make RS Media perform a Right Arm Place.	
<b>Right Arm High Pick Up</b>		Press to make RS Media perform a Right Arm High Pick Up.	
<b>Right Arm Push</b>		Press to make RS Media perform a Right Arm Push.	
<b>Stop Movement</b>		Press to stop RS Media performing any movement. Any media playing will not be affected.	
<b>Left Arm Push</b>		Press to make RS Media perform a Left Arm Push.	
<b>Left Arm High Pick Up</b>		Press to make RS Media perform a Left Arm High Pick Up.	
<b>Left Arm Place</b>		Press to make RS Media perform a Left Arm Place.	
<b>Left Wave</b>		Press to make RS Media perform a Left Arm Wave.	

 = Programmable

# ARM MODE MAPPING CHART

LEFT AND RIGHT SHIFT		
<b>Both Arms</b>		Control RS Media's left and right arms simultaneously <span style="float: right;"></span>
<b>Both Arms</b>		Control RS Media's left and right arms simultaneously <span style="float: right;"></span>
<b>User BodyCon 1</b>		User BodyCon / Macro slot
<b>User BodyCon 2</b>		User BodyCon / Macro slot
<b>Dance Routine</b>		User BodyCon / Macro slot
<b>User BodyCon 3</b>		User BodyCon / Macro slot
<b>User BodyCon 4</b>		User BodyCon / Macro slot
<b>User BodyCon 5</b>		User BodyCon / Macro slot
<b>User BodyCon 6</b>		User BodyCon / Macro slot
<b>User BodyCon 7</b>		User BodyCon / Macro slot
<b>User BodyCon 8</b>		User BodyCon / Macro slot
<b>User BodyCon 9</b>		User BodyCon / Macro slot
<b>User BodyCon 10</b>		User BodyCon / Macro slot
<b>Media Demo</b>		User BodyCon / Macro slot

 = Programmable

# DESCRIPTION OF MEDIA MODE

In Media mode, you can take advantage of RS Media's head-mounted camera, color LCD screen on his chest, full speaker system embedded in his armor, internal (built-in) memory and external memory card slot (SD memory card not included). Refer to the section Memory expansion for details.

In Media mode, you can access his media and PC connectivity functions using the remote controller or his hand controls.

RS Media can play MP3 (.mp3) and MPEG4 (.avi) files, take and display photos, and record and playback video files and audio clips. RS Media also comes with 3 pre-installed challenging Java games.

The functions in Media mode are organized into submenus (folders). The Media mode submenus are described in detail later on. They are as follows:

**NOTE: Video and photo files will switch off if you change RS Media's modes while they are displayed on the LCD screen.**

Audio files continue to play when you change RS Media's modes unless the audio file is pause, in which case, it will turn off the audio file completely.

When audio is playing in Control mode or Arm mode, RS Media will make no other sounds.

MENU ICON	MENU OPTION	DESCRIPTION
	<b>Audio</b>	Browse, delete or play back audio files. Refer to page 27.
	<b>Photos</b>	Browse, delete, display or take photos. Refer to page 29.
	<b>Video</b>	Browse, delete, record or play back video files. Refer to page 31.
	<b>Personality</b>	Browse, select and audition personalities. Refer to page 33.
	<b>Games</b>	Play Java games. Refer to page 34.
	<b>Options</b>	Enable USB and line-in connectivity; adjust volume levels, camera frequency, and white balance; adjust camera tracking settings; display RS Media information. Refer to page 37.

# MEDIA MODE FUNCTIONS OVERVIEW/ HAND CONTROLS

The following is an overview of some of the main functions in Media mode:

FUNCTION	BUTTON COMBINATION	DESCRIPTION
Volume up/down		Press up or down to adjust RS Media's volume.
Menu Navigation		Press up or down to navigate RS Media's menu.
Media Demo	 + 	Enables the demonstration of Media mode functions.
Change personality		Toggle personalities available on RS Media.
Return to main menu	 + 	Returns to the main menus in Media mode.
Select item in menu		Selects item in menu.
Return to previous menu		Navigates back up a step in the current menu.

## Hand controls

You can use RS Media's hand controls in Media mode to navigate through the Media mode menu.

**NOTE:** You can only use the outer buttons on RS Media's hand controls in Control mode and Arm mode to toggle through RS Media's modes.

FUNCTION	HAND CONTROL	DESCRIPTION
Navigate	 + 	Change modes.
Scroll up	 (RS Media's left arm)	Navigates to the previous item in the menu.
Scroll down	 (RS Media's right arm)	Navigates to the following item in the menu.
Select	 (RS Media's left arm)	Selects highlighted item.
Exit	 (RS Media's right arm)	Exits the current option.

# MEDIA FORMAT COMPATIBILITY

RS Media supports only certain media files for playback and only certain image formats. This means if you try to upload other types of files on RS Media to the RS Editing Suite or directly onto RS Media, he will not recognize the format and not be able to display it on his LCD screen.

Also, you can upload Java format games to RS Media. Refer to the section on RS Media Editing Suite for more details.

The following chart outlines the media and image formats RS Media supports.

MEDIA TYPE	FILE TYPE	FILE EXTENSION	DESCRIPTION
Video	MPEG4	*.avi	A standard format for compressing audio and video data files. <b>RS Media supports *.avi files with a resolution up to 320 x 240 pixels (QVGA).</b> NOTE: You need to have the required codecs on your computer to play back *.avi files properly.
Music	MP3	*.mp3	A standard format for compressing audio files. In the RS Media Editing Suite, you can use *.mp3 files in your Personalities, Macros or BodyCons. You can even upload *.mp3 files to RS Media to play as if he was a stereo system. <b>RS Media supports *.mp3 sampling bitrates up to 192 Kbps. Supported frequencies: 16 kHz, 22.05 kHz, 32 kHz, and 44.1 kHz.</b> <b>On RS Media, you should use *.mp3 files no larger than 10 MB.</b> NOTE: In the Personality editor, you can only use *.mp3 files up to 1024 kb (1 MB) in size.
	WAVE	*.wav	A standard lossless format for audio files. These types of files are usually uncompressed, therefore usually providing the best quality. In the RS Media Editing Suite, you can use *.wav files in your Macros or BodyCons. You can even upload *.wav files to RS Media to play as if he was a stereo system. <b>On RS Media, you should use *.wav files no larger than 10 MB.</b>
Image	JPEG	*.jpg or *.jpeg	A standard format for compressing still images, for instance, those used on digital still cameras. <b>RS Media supports *.jpeg files with a resolution up to 1024 x 768 pixels.</b>
Games	JAVA (Java games)	*.jar	Games programmed using Java, an object-oriented programming language developed by Sun Microsystems.

# DESCRIPTIONS OF MEDIA MODE MENUS



## Audio menu

The Audio menu allows you to browse, select, adjust or delete audio features available on RS Media.

To select a function in the Audio menu, use the Left directional arrow on the remote controller (or hand controls) to navigate to the function you want, and then press the Select button.

Note that you can also play music from an external source through RS Media. Refer to the section on Line-in option of the Options menu for more information.

MENU ITEM	DESCRIPTION
<b>Browse</b>	Allows you to look through the list of available audio files on RS Media.
<b>Delete</b>	Allows you to delete an audio file.
<b>Record</b>	Allows you to record an audio clip. Options include Start Recording and Set Record Volume (Under the Options menu).
<b>Now Playing</b>	Displays information on audio file currently playing. If no audio file is playing when you select this menu item, nothing happens.
<b>Options</b>	Allows you to select audio playback options. Options include Repeat Once, Repeat All, and Shuffle.
	<ul style="list-style-type: none"><li>- <b>Repeat Once</b>      Repeats each audio track once.</li><li>- <b>Repeat All</b>        Repeats all audio tracks.</li><li>- <b>Shuffle</b>            Randomizes audio file playback. Once a song begins to play, the Now Playing screen appears.</li></ul>

# AUDIO CONTROLS CHART

NO SHIFT	
	
<b>Record Audio</b>	<b>C</b> Press twice to start recording audio.
<b>Previous Track</b>	<b>X</b> Press to select previous track.
<b>Next Track</b>	<b>Z</b> Press to select the next track.
<b>Play / Pause Media</b>	<b>&gt;/  </b> Press to play or pause the current MP3.

LEFT SHIFT	
	
<b>Sound Memo Playback</b>	<b>C</b> Press to play back a Sound Memo, if one is present.
<b>Rewind</b>	<b>X</b> Press to Rewind the audio file currently playing.
<b>Fast Forward</b>	<b>Z</b> Press to Fast Forward the audio file currently playing.
<b>Camera Setting</b>	<b>&gt;/  </b> Press to display RS Media's camera settings.

RIGHT SHIFT	
	
<b>Audio Folder</b>	<b>a</b> Press to enter RS Media's Audio menu.
<b>Rewind X 2</b>	<b>X</b> Press to Rewind X 2 the audio file currently playing.
<b>Fast Forward X 2</b>	<b>Z</b> Press to Fast Forward X 2 the audio file currently playing.

# DESCRIPTIONS OF MEDIA MODE MENUS



## Photo menu

 
The Photo menu allows you to browse, delete, or take photos.

To select a function in the Photo menu, use the Left directional arrow on the remote controller (or hand controls) to navigate to the function you want, and then press the Select button.

In this menu, you can also set your photo display options including slideshow and photo timer options.

MENU ITEM	DESCRIPTION
<b>Browse</b>	Allows you to browse through the list of and display available photo files on RS Media.
<b>Delete</b>	Allows you to delete a photo file.
<b>Take photo</b>	Allows you to take a photo using RS Media's camera and display the image on RS Media's LCD screen. Press the camera button to take a photo.
<b>Options</b>	Allows you to select slideshow and Photo Timer.
- <b>Slideshow Timer</b>	Displays images in a series.
	- <b>Off</b> Slideshow setting is disabled. Default setting. - <b>2 Seconds</b> Sets slideshow delay between images to 2 seconds. - <b>5 Seconds</b> Sets slideshow delay between images to 5 seconds. - <b>10 Seconds</b> Sets slideshow delay between images to 10 seconds.
- <b>Photo Timer</b>	Sets the self-timer delay on RS Media before taking a photo.
	- <b>Off</b> Photo timer is disabled. Default setting. - <b>2 Seconds</b> Sets photo timer delay before taking a photo to 2 seconds. - <b>5 Seconds</b> Sets photo timer delay before taking a photo to 5 seconds. - <b>10 Seconds</b> Sets photo timer delay before taking a photo to 10 seconds.

# PHOTO CONTROLS CHART



## NO SHIFT

<b>Take Picture</b>		Press twice to take a photo.
<b>Previous Track</b>		Press to select the previous photo.
<b>Track &amp; Photo Human</b>		Track a human and take a photo.
<b>Next Track</b>		Press to select the next photo.



## LEFT SHIFT

<b>Track &amp; Photo Red</b>		Press to make RS Media track the color Red and take a photo.
<b>Camera Setting</b>		Press to display RS Media's camera settings.



## RIGHT SHIFT

<b>Photo Folder</b>		Press to enter RS Media's Photo folder.
<b>Track &amp; Photo Green</b>		Press to make RS Media track the color Green and take a photo.
<b>Track &amp; Photo Blue</b>		Press to make RS Media track the color Blue and take a photo.

# DESCRIPTIONS OF MEDIA MODE MENUS



## Video menu

The Video menu allows you to browse, delete, or take videos.

 
To select a function in the Video menu, use the Left directional arrow on the remote controller (or hand controls) to navigate to the function you want, and then press the Select button.

Note that video files can only be played in Media mode.

MENU ITEM	DESCRIPTION
<b>Browse</b>	Allows you to browse through the list of and play back available video files on RS Media.
<b>Delete</b>	Allows you to delete a video file.
<b>Take Video</b>	Allows you to record a video clip using RS Media's camera and display the video on RS Media's LCD screen. Press the camera button on the remote controller to record video.

# VIDEO CONTROLS CHART

## NO SHIFT



**Play / Pause Media**



Press to play or pause the current video.

## LEFT SHIFT



**Video Record**



Press twice to record a short video. (The second press can be without Left Shift)  
**NOTE: Each track is a maximum of approximately 8 minutes**

**Rewind**



Press to Rewind the video currently playing.

**Fast Forward**



Press to Fast Forward the video currently playing.

**Camera Setting**



Press to display camera settings.

## RIGHT SHIFT



**Video Folder**



Press to enter RS Media's Video folder.

**Video memo Playback**



Press to play back a Video Memo track, if one is present.

**Rewind X 2**



Press to Rewind X 2 the video currently playing.

**Fast Forward X 2**



Press to Fast Forward X 2 the video currently playing.

# DESCRIPTIONS OF MEDIA MODE MENUS/ PERSONALITY CONTROLS CHART



## Personality menu

The Personality menu allows you to browse and select one of RS Media's four built-in personalities, or one of your own customized personalities. You can upload your own customized RS Media personality to the robot using the RS Media Editing Suite. Refer to page 52-53 for more information.

To select a personality in the Personality menu, use the Left directional arrow on the remote controller (or hand controls) to navigate to the function you want, and then press the Select button.

MENU ITEM	DESCRIPTION
<b>Personality</b>	Allows you to change the current personality and select a new personality.
<b>Audition</b>	Allows you to preview BodyCon files in the current personality

## Personality controls chart

NO SHIFT



**Change Personality**



Press to toggle through RS Media's personalities, including those entered by the user.

LEFT SHIFT



**Personality Folder**



Press to enter RS Media's Personality folder.

# DESCRIPTIONS OF MEDIA MODE MENUS/ GAME CONTROLS OVERVIEW



## Games menu

The Games menu allows you to browse and select one of RS Media's three preinstalled Java games. The three games included are:

- Bubble Soccer
- Ghost Force
- Vortex Racer

You can download more Java games and upload them to RS Media using the RS Media Editing Suite.

For a description of the game play and controls, refer to the next section, Game controls overview below.

To select a game in the Games menu, use the Left directional arrow on the remote controller (or hand controls) to navigate to the game you want, and then press the Select button.

MENU ITEM	DESCRIPTION
<b>Bubble Soccer</b>	Selects the game Bubble Soccer.
<b>Ghost Force</b>	Selects the game Ghost Force.
<b>Vortex Racer</b>	Selects the game Vortex Racer.

## Games controls overview

NOTE: When using the Games controls, you can only use the right directional pad and right-side buttons on the remote controller.

BUTTON	FUNCTION	DESCRIPTION
	<b>Directional control</b>	Controls the direction of the objects in the game.
	<b>Left soft key</b>	Controls the left onscreen function.
	<b>Right soft key</b>	Controls the right onscreen function.
	<b>Select action</b>	Selects or confirms an item or action.
	<b>Quit game</b>	Quits the game and returns to Media mode. To return to the game main menu, use the Quit command in the actual game menu, instead of the Stop button.

# GAME CONTROLS OVERVIEW / DESCRIPTION OF GAMES

If you do upload new Java games to RS Media, refer to the gameplay mapping of the keys for RS Media remote controller as follows:

MOBILE PHONE KEY	RS MEDIA REMOTE CONTROLLER BUTTON
NUM1	
NUM2	
NUM3	
NUM4	
NUM5	
NUM6	
NUM7	
NUM8	
NUM9	
SOFT1	
SOFT2	

## Description of games

The following are descriptions of the pre-installed games on RS Media.

### Ghost Force


Three law enforcers are sworn in to create the Ghost Force squad to go and fight the flying army of Commander Boralo and free Doctor Larson who has been kidnapped for his extraordinary scientific knowledge. They are convinced that they will succeed. If they are successful, they will have avoided the Commander's dictatorship and Doctor Larson will have ended pollution on our planet thanks to his work on non-toxic fuels.

### Game strategy

Ghost Force is a shoot 'em up in the best tradition of the golden age of the greatest arcade games. Rediscover the mood of the games arcade with this sublime first person shooter with its incredible technical features and a gameplay that is synchronized like a watch. Are you ready for the challenge?

### Ghost Force game controls

BUTTON	FUNCTION	DESCRIPTION
	<b>Directional control</b>	Controls the direction of the objects in the game.
	<b>Left soft key</b>	Controls the left onscreen function.
	<b>Right soft key</b>	Controls the right onscreen function.
	<b>Missile</b>	Launches missiles.
	<b>Exit game</b>	Exits the game and returns to Media mode. To return to the game main menu, use the Quit command in the actual game menu, instead of the Stop button.

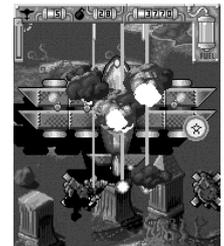

# DESCRIPTION OF GAMES

## Vortex Racer

Doctor Geek has gathered the best pilots in the Galaxy in order to determine who will be the first to use his brand new invention: a vessel capable of travelling through the Vortexes.

### Game strategy

Travel through planets with spectacular backgrounds, but be careful, you don't have time for tourist visits: you're going to have to face merciless, frighteningly intelligent opponents, at speeds that defy the imagination. Superb graphics and impeccable technical production will get you hooked on this futuristic racing game.

### Vortex Racer game controls

BUTTON	FUNCTION	DESCRIPTION
	<b>Directional control</b>	Controls the direction of the racer left or right.
	<b>Left soft key</b>	Controls the left onscreen function.
	<b>Right soft key</b>	Controls the right onscreen function.
	<b>Boost up</b>	Boost your fuel.
	<b>Missile</b>	Launches missiles.
	<b>Exit game</b>	Exits the game and returns to Media mode. To return to the game main menu, use the Quit command in the actual game menu, instead of the Stop button.



## Bubble Soccer

This remake of an old classic arcade game, Bubble Soccer needs your help!

### Game strategy

You must shoot away all the footballs that are lying on the soccer fields, otherwise the big championship cannot take place! The increasing need for speed and logic at each level makes it hard to finish the 50 levels! But if you keep in mind that the next ball coming might change the order of play, you might finish before the time runs out!

### Bubble Soccer game controls

BUTTON	FUNCTION	DESCRIPTION
	<b>Directional control</b>	Controls the direction of the soccer ball left or right.
	<b>Left soft key</b>	Controls the left onscreen function.
	<b>Right soft key</b>	Controls the right onscreen function.
	<b>Kick</b>	Launches the soccer ball.
	<b>Exit game</b>	Exits the game and returns to Media mode. To return to the game main menu, use the Quit command in the actual game menu, instead of the Stop button.





## Options menu

The Options menu allows you to adjust RS Media's system settings (including volume level, camera, and display configurations), control USB and line-in connectivity, and set RS Media tracking options.

To adjust any of the settings available in the options menu, select the setting you want to change, then press the right directional pad arrows to increase or decrease the levels of the setting accordingly.

MENU ITEM	DESCRIPTION
<b>USB Mode</b>	Allows you to connect your RS Media to your computer.
<b>Volume</b>	Allows you to adjust the audio levels.
	<ul style="list-style-type: none"> <li>- <b>Volume level</b> Allows you to set the volume level on RS Media.</li> <li>- <b>Rec Level</b> Allows you to set the audio recording level on RS Media.</li> <li>- <b>Equalizer</b> Allows you to set the equalizer levels for bass and treble frequencies on RS Media.</li> <li>- <b>Bass</b> Allows you to adjust the bass frequency levels.</li> <li>- <b>Treble</b> Allows you to adjust the treble frequency levels.</li> </ul>
<b>Line In</b>	Allows you to enable an external audio source to play through RS Media using the line-in jack.
	<ul style="list-style-type: none"> <li>- <b>On</b> Enables an external audio source to play through RS Media. <b>NOTE: When the external audio source is enabled, RS Media will not play any internal sounds.</b></li> <li>- <b>Off</b> Disables any external audio source to play through RS Media.</li> </ul>
<b>Camera Freq</b>	Allows you to adjust camera frequencies.
	<ul style="list-style-type: none"> <li>- <b>Auto</b> Allow RS Media to automatically adjust camera frequency.</li> <li>- <b>50 Hz</b> Set the camera frequency to 50 Hz.</li> <li>- <b>60 Hz</b> Set the camera frequency to 60 Hz.</li> </ul>
<b>White Balance</b>	Adjusts the color temperature settings on RS Media. This function compensates for different colors of light emitted by various light sources.
	<ul style="list-style-type: none"> <li>- <b>Auto</b> Allows RS Media to automatically adjust the white balance settings.</li> <li>- <b>Indoor Yellow</b> Adjusts RS Media's white balance settings to indoor incandescent lighting (i.e. standard lightbulbs)</li> <li>- <b>Indoor White</b> Adjusts RS Media's white balance settings to indoor non-incandescent lighting (i.e. fluorescent lights)</li> <li>- <b>Sunlight</b> Adjusts RS Media's white balance settings to sunlight. <b>NOTE: Avoid using RS Media in direct sunlight for extended periods of time.</b></li> </ul>
<b>Camera Tracking</b>	Allows you to enable camera tracking on RS Media.
	<ul style="list-style-type: none"> <li>- <b>Off</b> Disables camera tracking.</li> <li>- <b>Human</b> Uses camera to track human objects.</li> <li>- <b>Red</b> Uses camera to track red objects.</li> <li>- <b>Green</b> Uses camera to track green objects.</li> <li>- <b>Blue</b> Uses camera to track blue objects.</li> </ul>
<b>USB Net</b>	Connect RS Media to a network
	<ul style="list-style-type: none"> <li>- <b>On</b> Enable network connection.</li> <li>- <b>Off</b> Disable network connection. Java games will be listed in the "Game" option</li> </ul>
<b>About</b>	Displays information about your RS Media

# MEDIA MODE MAPPING CHART

NO SHIFT 		
<b>Menu Navigation</b>		Press up or down to navigate RS Media's menu.
<b>Volume Up &amp; Down</b>		Press up or down to adjust RS Media's volume.
<b>Menu Select</b>		Press to select from RS Media's menu.
<b>Take Picture</b>		Press twice to take a photo.
<b>Game Menu</b>		Press to select Game menu.
<b>Previous Menu</b>		Press to select the previous menu.
<b>Change Personality</b>		Press to toggle through RS Media's personalities, including those entered by the user.
<b>Record Audio</b>		Press to start recording audio.
<b>Stop / Full Reset</b>		Press to stop RS Media from performing his current action. Press and hold for about 3 seconds to perform a full reset to default.
<b>Previous Track</b>		Press to select the previous track. (Not available while playing video)
<b>Track &amp; Photo Human</b>		Track a human and take a photo.
<b>Next Track</b>		Press to select the next track if media is playing. (Not available for video)
<b>Play / Pause Media</b>		Press to play or pause the current MP3 or MPEG4.

# MEDIA MODE MAPPING CHART

LEFT SHIFT 		
<b>Upper Body Only</b>		Control upper body with the Left Control Pad.
<b>Head Only</b>		Control head with the Right Control Pad.
<b>Menu Select</b>		Press to select from RS Media's menu.
<b>Video Record</b>		Press twice to record a short video. (The second press can be without Left Shift)
<b>Media Demo</b>		Press to perform his Media demo.
<b>Media Menu</b>		Press to enter RS Media's Media Menu.
<b>Personality Folder</b>		Press to enter RS Media's Personality folder.
<b>Sound Memo Playback</b>		Press to play back a Sound Memo track, if one is present.
<b>Sleep / Power Down</b>		Press once to make RS Media enter Sleep Mode. Press when already in Sleep Mode and he will Power down.
<b>Rewind</b>		Press to Rewind the video or song currently playing.
<b>Track &amp; Photo Red</b>		Press to make RS Media track the color Red and take a photo.
<b>Fast Forward</b>		Press to Fast Forward the video or song currently playing.
<b>Camera Setting</b>		Press to display RS Media's camera settings.

# MEDIA MODE MAPPING CHART

RIGHT SHIFT 		
Upper Body Only		Control upper body with the Left Control Pad.
Head Only		Control head with the Right Control Pad.
Menu Select		Press to select the currently highlighted menu option.
Photo Folder		Press to enter RS Media's Photo folder.
Audio Folder		Press to enter RS Media's Audio folder.
Video Folder		Press to enter RS Media's Video folder.
Video Memo Playback		Press to play back a Video Memo track, if one is present.
Stop Movement		Press to stop RS Media from performing any movement. Any media playing will not be affected.
Rewind		Press to Rewind X 2 the video or song currently playing.
Track & Photo Green		Press to make RS Media track the color Green and take a photo.
Fast Forward		Press to Fast Forward X 2 the video or song currently playing.
Track & Photo Blue		Press to make RS Media track the color Blue and take a photo.

# MEDIA MODE MAPPING CHART

LEFT AND RIGHT SHIFT		
Both Arms		Control RS Media's left and right arms simultaneously
Both Arms		Control RS Media's left and right arms simultaneously
User BodyCon 1		User BodyCon / Macro slot
User BodyCon 2		User BodyCon / Macro slot
Dance Routine		User BodyCon / Macro slot
User BodyCon 3		User BodyCon / Macro slot
User BodyCon 4		User BodyCon / Macro slot
User BodyCon 5		User BodyCon / Macro slot
User BodyCon 6		User BodyCon / Macro slot
User BodyCon 7		User BodyCon / Macro slot
User BodyCon 8		User BodyCon / Macro slot
User BodyCon 9		User BodyCon / Macro slot
User BodyCon 10		User BodyCon / Macro slot
Media Demo		User BodyCon / Macro slot

## Sonic sensors

FUNCTION	MODE	BUTTON	DESTRPTION
Toggle hearing On/Off	Control		Turn the sonic sensor on or off

RS Media has stereo sonic sensors that can detect sharp, loud sounds such as a handclap. He listens for sounds when he is stationary and/or quiet; he will not be able to listen to sounds when he is lying down or sitting.

## Listening

When RS Media first hears a sound, he will turn his vision systems off and listen for more sounds. If he hears too many sounds and is not able to identify the direction from which they come, he will turn his sonic sensors off. You can turn the sonic sensors back on using the remote controller.

If he hears a sound to the side, he will turn towards the source; if he hears a sound directly in front of him, he will acknowledge the source with a voice file.

### *If empty handed*

RS Media will walk towards the source (approximately 1 meter / 3 feet), but you can stop him by putting your hand in front of his face.

### *If object in hand*

RS Media will wait 4 seconds and then walk towards the source and drop the object he is carrying. However, you can make him throw the object by making a sound during the 4 second wait period.

**NOTE: If his upper body is twisted and he has to turn before walking towards the sound, he will turn his vision off and not respond to a hand in front of his face while he turns.**

RS Media will not listen for sounds while he is performing any movements, or if he is tracking anything with his vision systems.

RS Media assumes all sounds come from the direction he is facing (left, right, or ahead).

## Tilt sensors

RS Media is equipped with tilt sensors that interrupt most functions to prevent any damage if he is knocked over. If he is turned over face-down, for instance, he will stop functioning. If RS Media falls on his back, he will stop what he is doing. When trying to control RS Media, if he is not standing, you will be informed by him that he cannot perform certain commands or that he needs to be standing, and so will get up.

To make RS Media stand up from a sitting or lying position, use the following command:

FUNCTION	MODE	BUTTON COMBINATION
Stand up	Control Mode	 + 
	Arm Mode	


## Grip sensors

When you command RS Media to pick up or grab something, he will check his grip sensors to see if the pick-up attempt was successful. If he does not have anything in his hands he will automatically repeat the action one more time.

## Foot sensors

RS Media has two touch sensors on each foot, one at the front and one at the back. They serve as detectors while he explores his environment, enabling him to avoid obstacles. Sentence should now read "You can trigger either of his back foot sensors for an emergency stop by touching the back foot sensors directly while he is walking forward.

The foot sensors are also used for Puppet Mode (Positional Programming). See p.48.

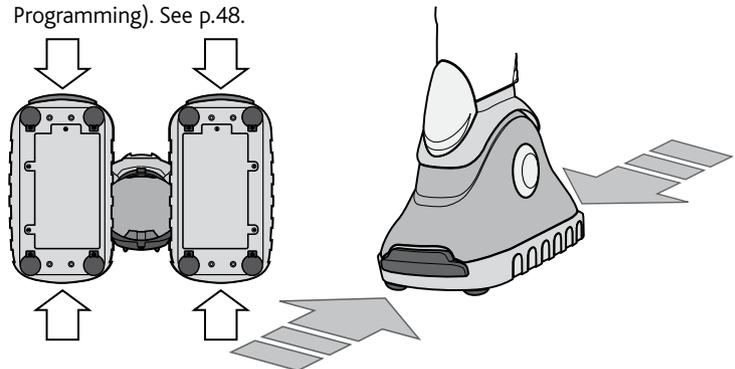

RS Media is equipped with two sets of vision systems. One vision system tracks movements and detects obstacles; the other system differentiates between certain colors.

## Infrared vision systems

RS Media's infrared vision system allows him to respond to commands from the remote controller.

FUNCTION	MODE	BUTTON COMBINATION	DESCRIPTION
Toggle vision on/off	Control		Turn the IR sensor on or off


## Flinch response

If RS Media is not already tracking something, and you place something very close to his eyes, he will perform a flinch response.

He will turn his color camera ON when he does this. If the object remains close and stationary for a few seconds he will try to identify the color. (See Color Recognition, page 44).

If you do not hold the object stationary in front of his face, he will start to track the movement with his IR vision.

**NOTE:** To make RS Media perform a flinch you must hold the object close enough to his face to cover all sensors, as shown in the diagram.

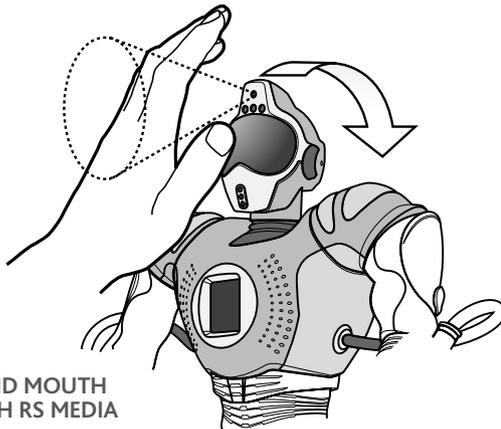

COVER THE EAR AND MOUTH SENSORS TO FLINCH RS MEDIA

## Long-range infrared vision

RS Media's long-range IR vision enables him to track objects within his long-range IR vision. He will track the object using both his head and upper body.

He will not make comments on objects tracked using long-range IR vision.

When he tracks long-range movement, his eyes flash at a slow rate. (See Blinking on page 45).

## Close-range infrared vision


When tracking something at a close range, RS Media will follow it as far as his head turns.

He will make comments about objects seen using the close-range IR vision. When he tracks close-range movement, his eyes flash at a fast rate. (See Blinking on page 45).

If an object that RS Media is tracking with his close-range IR vision remains stationary for a few seconds, he might ask you to give it to him.

**CAUTION:** Be careful when offering RS Media an object; he will drop anything he is already holding.

**NOTE:** If you make RS Media track an object with his close range vision for too long he will get bored and stop tracking the object.

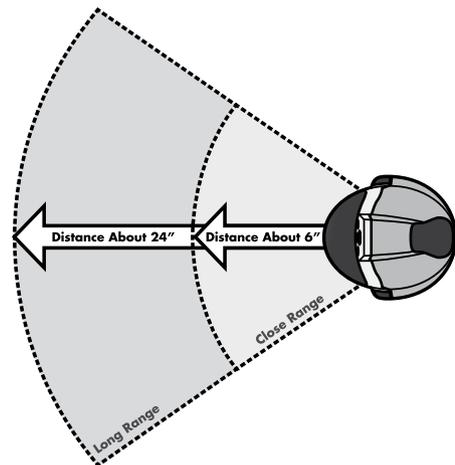

## Obstacle avoidance


RS Media uses his IR Vision System to avoid obstacles while walking.

**CAUTION: RS Media is not able to detect the edge of tables. Make sure he does not walk near stairs or steps.**

RS Media's IR vision does not function while he is walking backwards or turning, and may result in him bumping into things.

RS Media is sometimes too cautious and may refuse to walk through openings that he is able to pass through. If this happens you can turn off his Vision Systems. He will use his foot sensors to react to obstacles when his Vision Systems are off (See foot Sensors on page 42).

RS Media's infrared vision system is based on reflection. This means that he can see highly reflective surfaces like white walls or mirrors more easily and at greater distances than he can see matte or black surfaces.

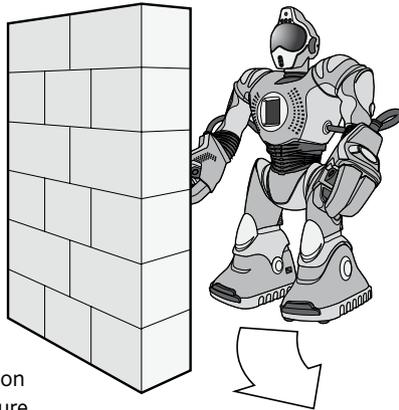

## Color recognition

RS Media has a unique color vision system. RS Media can identify pure primary colors - red, green and blue.

He can also recognize skin tones based on the color of the palms of your hands. The color camera is activated with a flinch (see page 43).

**NOTE: For accurate color detection, you should adjust the white balance setting for the lighting conditions in which you are using RS Media. Refer to Color Camera Settings on p.45**

When an object suddenly appears in front of him (and he was not previously looking at something), RS Media will flinch and turn on his color camera.


If the object stays stationary and within 1-inch (2.5 cm) of the camera, he will try to identify the color of the object.

If the object does not stay close he will turn his color camera off.

While the camera is on (while checking the color or tracking it), his eyes will flash at a medium rate (See Blinking on page 45).

## Identifying and tracking

When RS Media identifies the color of an object, he will track the object's movements. While he tracks the object, RS Media will say that he is tracking the object.

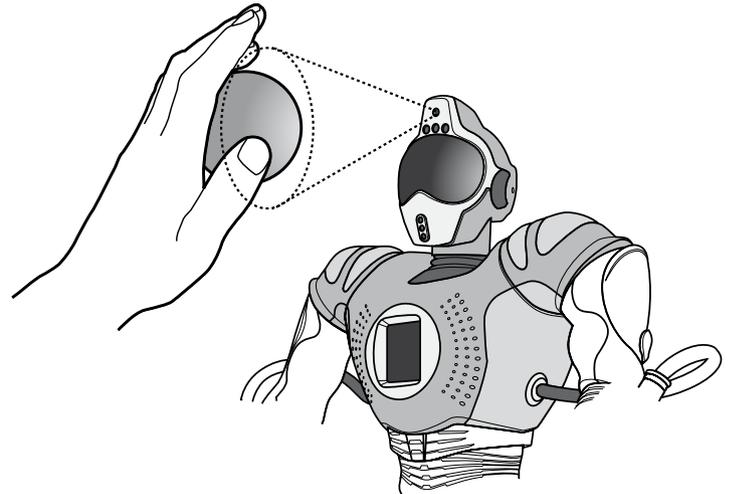

## Tracking timeout

RS Media will time out after tracking for about 30 seconds and exit color camera mode.

## Object disappears

If RS Media loses the object he is tracking, he will inform the user and exit the color camera mode.

## Still objects

If RS Media sees a red, green, or blue object held still in front of him, he will perform a grab BodyCon. If the pick up isn't successful the color camera mode will end. If the pick up is successful, he will look for a similar colored object.

If he cannot find a similar colored object, he will exit color camera mode. If he finds a similar colored object, he will throw whatever is in his hand at the object. This will end color camera mode.

## Color camera settings

RS Media's color camera might sometimes have problems identifying certain colors, especially skin-tones and the color blue, under different light conditions. You can change the white-balance setting manually by choosing white balance under options in Media Mode.

SETTING	DESCRIPTION
<b>Auto Balance</b> 	RS Media automatically determines the best color camera settings and adjusts them for the lighting in his current environment. <b>NOTE: If Photo or Video quality is poor, changing the color camera settings might help improve the image.</b> This is the default setting.
<b>Indoor Yellow</b> 	Adjusts the color camera setting for artificial tungsten lighting (i.e. common household light bulbs) as the dominant light source.
<b>Indoor White</b> 	Adjusts the color camera setting for white-toned indoor lighting (i.e. fluorescent bulbs) as the dominant light source.
<b>Sunlight</b> 	Adjusts the color camera setting for natural sunlight as the dominant light source.

**NOTE: When RS Media tracks colored objects, he will respond to the largest object of the correct color. If the colored object is in front of a colorful background, this can interfere with his color tracking.**

When it is too dark, RS Media will have trouble correctly identifying colors, will give false readings, and will not be able to track objects using his color camera.

## Blinking

RS Media's eyes blink to indicate the status of his vision or sound systems.

EYES STATUS	POSSIBLE STATUS DESCRIPTIONS
<b>Eyes OFF</b>	RS Media is turned OFF. RS Media in Sleep Mode.
<b>Eyes ON (constant light)</b>	No object detected, and vision is ON and active.
<b>Very slow blinking</b>	RS Media in Guard Mode.
<b>Slow blinking</b>	Distant object detected. Refer to page 43.

<b>Medium blinking (medium periods of eyes ON with short periods of eyes OFF)</b>	Color checking and tracking. Refer to page 44.
<b>Medium reverse blinking (medium periods of eyes OFF with short periods of eyes ON)</b>	RS Media's vision is shut down. RS Media is listening to sounds.
<b>Fast blinking</b>	Close object detected. Refer to page 43.

## Blinking in Programming modes

RS Medias eyes blink very quickly when waiting for a visual cue, or blink slowly when waiting for a sonic cue in a programming mode.

## Guard Mode

FUNCTION	BUTTON COMBINATION
<b>Control Mode</b>	 + 

Put RS Media into Guard Mode and he will become stationary. His infrared vision sensors and stereo sonic sensors will sound an alarm or perform a program assigned to them when triggered by audio or visual stimuli.  
 If there is no program stored in Vision or Sound then RS Media will perform his default Guard Mode reaction.  
 RS Media will leave Guard Mode at the touch of ANY controller button (except Left Shift & Right Shift buttons).  
 If he hears ten sounds in a row with no vision disturbances in between, he will turn his sound sensors off. If he has 10 vision disturbances in a row with no sound disturbances between them, he will turn his vision sensors off. If both are turned OFF in this manner he will exit Guard Mode.

## Caution

**As RS Media will become animated during Guard Mode, Do not to leave him near the edge of a table.**

## Note

**Touch sensors do not function in Guard Mode. RS Media will go to Sleep Mode after about 30 minutes in Guard Mode. Any disturbance during Guard Mode will reset the 30 minutes time out.**

# ROBOT INTERACTION

RS Media can interact with any one of the following robotic companions at a time: Roboreptile, Robosapien™ V2, RS Media™, Roboraptor™, or Robopet™.

To have RS Media interact with his companions, align RS Media facing the other robot, on a level surface with a clear line of sight. Turn RS Media's companion on and then press the associated button combination on the remote controller to initiate the interaction.


## RS Media™ / Robosapien™ V2 interaction

**RS Media:** To initiate the interaction between two RS Medias, you must point the remote controller at only one RS Media.

**Robosapien V2:** To initiate the interaction between RS Media and Robosapien V2, point the remote controller only at RS Media.

**NOTE:** RS Media's remote controller can also operate Robosapien V2.

MODE	BUTTON COMBINATION
Arm mode	<b>D</b>

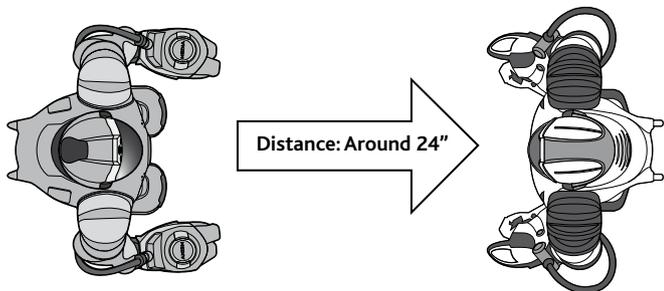


## Roboreptile™ interaction

When you turn Roboreptile on, he goes through a brief wait state.

**NOTE:** You should initiate the interaction routine before Roboreptile enters Free Roam mode; otherwise, you will have to start the process over. To keep Roboreptile from entering Free Roam mode, press the stop button on Roboreptile's remote controller.

MODE	BUTTON COMBINATION
Control mode	<b>R</b> + <b>D</b>

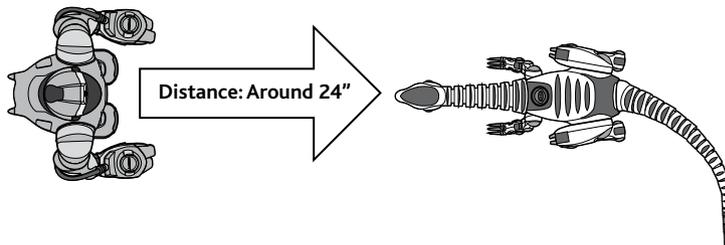


## Roboraptor™ interaction

When you turn Roboraptor on, he goes through a brief wait state.

**NOTE:** You should initiate the interaction routine before Roboraptor enters Free Roam mode; otherwise, you will have to start the process over. To keep Roboraptor from entering Free Roam mode, press the stop button on Roboraptor's remote controller.

MODE	BUTTON COMBINATION
Arm mode	<b>L</b> + <b>D</b>

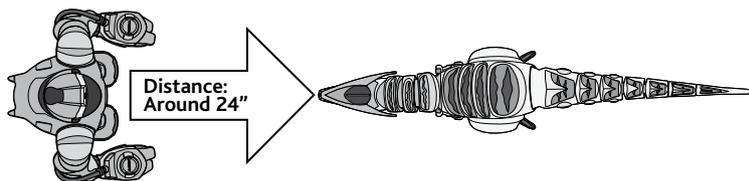


# ROBOT INTERACTION/ ADVANCED INTERACTION WITH RS MEDIA

## Robopet™ interaction

Turn Robopet on, and then command him to sit down. Once he is sitting, you should initiate the interaction routine within 10 seconds before he enters Free Roam mode; otherwise, you will have to start the process over.

**NOTE: Robopet's Edge Detect switch must be set to the OFF position to perform this interaction.**

MODE	BUTTON COMBINATION
Arm mode	 + 

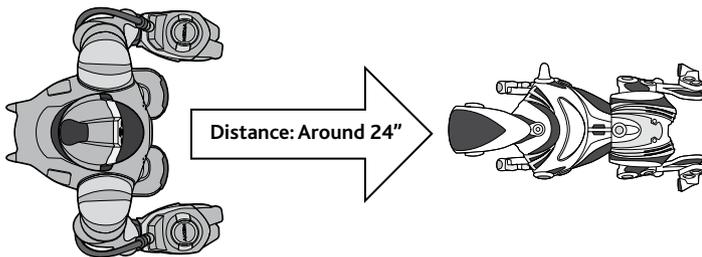

## Advanced interaction with RS Media

This section describes advanced interactions you can have with your RS Media. You can directly program RS Media (with or without the remote controller) or take advantage of the RS Media Editing Suite software to fully customize his features.

### Programming capability

Any function from the Control or Arm mode function charts that can be programmed in all program modes (except Puppet mode) are denoted with the following symbol:

SYMBOL	DESCRIPTION
	Function is programmable.

## Directly programming RS Media

You can directly program RS Media or program him using the remote controller. You can program RS Media directly in one of five (5) ways.

PROGRAMMING MODE	DESCRIPTION
	<b>Puppet mode</b> Allows you to directly program a sequence of movements by manipulating RS Media directly.
 	<b>Main Program mode</b> Allows you to program a sequence of movements on RS Media by using commands from the remote controller.
 	<b>Sound Program mode</b> Allows you to assign a sequence of movements that are triggered by a sharp sound when RS Media is in Guard mode. Refer to page 28.
 	<b>Vision Program mode</b> Allows you to assign a sequence of movements that are triggered by a close-range movement detected by the IR sensor when RS Media is in Guard mode. Refer to page 28.
	<b>Editing Suite</b> Allows you to customize and create your own Macros, BodyCons, and Personalities using the RS Media Editing Suite, and upload them to your robot. Use this software also to manage files on RS Media.

**NOTE: Media Mode functions cannot be programmed as a step in a program.**

**NOTE: Program modes are disabled in Control Mode and Arm Mode when audio is playing.**

**NOTE: All direct programming is stored on RS Media through Control Mode and Arm Mode. Main Program, Sound Program and Vision Program have two screens to indicate the mode in which you are programming.**

# ADVANCED INTERACTION WITH RS MEDIA



## Puppet Mode (Positional programming)

Puppet mode is a method of programming a sequence of movements into RS Media by manipulating him manually.

FUNCTION	MODE	BUTTON COMBINATION	DESCRIPTION
Enter Puppet Mode	Control		Enters the main puppet mode programming.
Playback Puppet Mode	Control		Plays back the main puppet mode program stored in RS Media.

The starting position for RS Media in this programming mode will be the position his body is in when you begin. RS Media will return to the starting position whenever the program is activated in this mode.

Move his arms and upper body around manually.

Each time you stop moving him, he will store the position and acknowledge it with a speech file. You can move the following:

- Shoulders
- Wrists
- Waist (lean backwards and forwards)
- Waist (lean side-to-side)
- Waist (twist left or right)

You can move more than one position at the same time. For instance, you can move both arms up together or you can make him reach out in front while bending him forward to the side.

If you stop programming for about 3 seconds RS Media will exit the Program mode and then repeat the moves.

If you move RS Media into a position that is unsafe (for example, if you lean him forward too far, or backwards so that he falls over), he will adjust himself automatically when he plays the moves back.

**NOTE: Do not force RS Media to move beyond his mechanical limits, nor move him too fast.**

## Puppet Mode: Foot sensors

You can combine upper body movements with leg movements and walking using the foot sensors in Puppet mode.

ACTION	DESCRIPTION
<b>Both front foot sensors pressed simultaneously</b>	RS Media will take several steps forward.
<b>Both rear foot sensors</b>	RS Media will take several steps backwards.
<b>One front sensor + rear sensor of the opposite leg</b>	RS Media will turn forwards in the direction of the foot sensor that was triggered on the front.
<b>Front and back sensor of same foot</b>	RS Media will kick forwards using the triggered foot.

- Main Positional Program Mode has a maximum of 12 moves. If you reach this maximum, the robot will tell you the memory is full, exit the program mode, and play back the moves.
- To clear a positional program, enter the mode and do not move the robot for about 3 seconds. He will automatically exit the mode and tell you that the memory is cleared.

## Puppet Mode: Left and Right side programming

You can assign different programs to the robot's left and right foot sensors using the left and right positional programming modes.

- To enter one of these programming modes, tap one of his foot sensor buttons twice within 1 second.
- You can then program the robot in the same way that you do for Main Positional Program Mode.
- You can clear the program by entering the programming mode and not moving the robot for about 3 seconds.
- To play back the program, single tap either one of his foot sensors on the same side of the body to which you assigned the program.
- Left and Right Puppet Modes have a maximum of 6 moves for each foot. If you reach this maximum, the robot will tell you the memory is full, exit the program mode, and play back the moves.

**NOTE: If RS Media detects anything in his vision or is tracking (his eyes will be blinking. See p.45), he will not enter Puppet Mode.**

# ADVANCED INTERACTION WITH RS MEDIA



## Main Program Mode

Main Program mode allows you to program a sequence of movements into RS Media by entering commands from the remote controller.

FUNCTION	MODE	BUTTON COMBINATION	DESCRIPTION
Enter Main Program mode	Control	+	Enters the Main Program mode
Main Program Playback	Control	+	Plays back the Main Program mode routine.
Exit Main Program mode	Control	+	Exits the programming mode. RS Media will play back the program if one is stored.
Clear last entry	Control	+	Clears the last entry in the programming routine
Clear program	Control	+	Clears the current programming routine.

In this programming mode, when you use the remote controller to enter commands, RS Media will remember them in order.

For example, you can enter walking steps, arm and upper body movements, demonstration routines and animations. Each one is a single step in the program.

If you use single positional movements, such as an arm or waist movements, the range of the movement is determined by the amount of time you hold the controller button down. A full movement is reached after 3 seconds of holding the button down.

If you enter a Stop command into a sequence, the robot will pause for about 3 seconds during the program playback.

Main Program Mode has a maximum of 20 moves. If the memory is full,

when you enter the Main Program mode, RS Media will tell you there is no more room left.

RS Media will automatically exit Main Program Mode after waiting for about 90 seconds. If steps have been entered, he will play back the program.

**NOTE: All programming stays in the RS Media's internal memory even after the robot is turned off.**

## Subroutines

RS Media can play back a stored sound, vision, or puppet program in Main Program mode. These actions and movements can also be entered as a step in a program; these steps are called subroutines.

You can add subroutine programs into the Main Program mode to increase the length of your stored programs.

## Sound and Vision subroutines

When you add a sound or vision subroutine, it will be entered as a step in the program. When the program is played back and reaches the subroutine step, the preprogrammed sound or vision routine will be performed.

If you add a sound or vision subroutine but there is nothing in the sound or vision program memory, then the robot will wait about 90 seconds before continuing with the programmed routine. If RS Media hears a sharp sound or receives a close IR trigger before the 90 seconds timeout, depending on which subroutine was added, he will immediately continue with the programmed routine.

The following chart outlines the subroutine functions:

FUNCTION	MODE	BUTTON COMBINATION	DESCRIPTION
Enter Sound subroutine	Control	+	Enters the Sound subroutine in the Main Program mode.
Enter Vision subroutine	Control	+	Enters the Vision subroutine in the Main Program mode.

# ADVANCED INTERACTION WITH RS MEDIA

## Positional subroutines

Positional subroutines (puppet mode programs) can be added as a step in your robot program. When the program is played back and reaches the subroutine step, the preprogrammed positional routine will be performed.

FUNCTION	MODE	BUTTON COMBINATION	DESCRIPTION
Enter Positional subroutine	Control		Enters the Positional subroutine in the Main Program mode.

If RS Media reaches this step in his programming and does not have a stored Puppet Mode (positional) program, he will immediately skip to the next step in the programmed routine.

## Guard subroutine

Guard subroutines can be added as a step in your robot program.

FUNCTION	MODE	BUTTON COMBINATION	DESCRIPTION
Enter Guard mode subroutine	Control	 + 	Enters the Guard subroutine in the Main Program mode.

- He will wait about 90 seconds for a sharp sound or close IR trigger before continuing with the programmed routine.
- If he gets a sound or vision trigger during this time he will perform the relevant sound or vision subroutine, or the default Guard Mode reaction before continuing with the remaining programmed routine.

# PROGRAMMING RS MEDIA USING RS MEDIA EDITING SUITE

## Introduction to the RS Media Editing Suite

The RS Media™ Editing Suite is the perfect software companion that complements the multimedia robotic experience of RS Media. It allows you to manage and customize data files, games and other programs created on your RS Media or PC, giving you complete creative control of content and reprogramming.

The RS Media Editing Suite softwareCD is packaged with RS Media.

Visit [www.wowweesupport.com](http://www.wowweesupport.com) to download any updates to the RS Media Editing Suite software.

## Installing the software

To install RS Media Editing Suite from the provided CD, do the following:

1. Insert the CD in the CD-ROM drive (or DVD-ROM if available).

The RS Media Editing Suite welcome dialog appears.



**NOTE: If the RS Media Editing Suite welcome dialogue does not appear, locate the *RSMediaSetup.msi* file on the CD drive and double-click on it to begin the installation process.**

Follow the instructions that appear onscreen to install the software.

You can now use the RS Media Editing Suite to customize your RS Media.

## Running the software

After installing the software, you can begin using it. To run the software:

1. From your Windows Start menu, locate the Programs folder, then the Wowwee folder.
2. Select **RS Media Editing Suite**.

The program will start up.

**NOTE: The program will automatically install any updates available from the internet using an automatic web installer.**

**NOTE: A shortcut to the RS Media Editing Suite software will be created on your Windows desktop.**

## Software overview

The RS Media Editing Suite interface consists of four main components that allow you to customize RS Media:

- Personality editor
- Macro editor
- BodyCon editor
- Media Organizer

Each component is represented by a tab in the RS Media Editing Suite interface. To navigate between each component, click on its associated tab in the interface.

# PROGRAMMING RS MEDIA USING RS MEDIA EDITING SUITE

## Help file


The RS Media Editing Suite has a help file which contains general instructions and tutorials on using the software interface on your computer.

You can access the help file for the RS Media Editing Suite at any time by clicking on the [?] button in the software interface. When you click on the help button, the help file will open onto the page relevant to your location in the software interface; this is called contextual help.

You can download an updated help file from the Wowwee support site and install it in your Program Files\Wowwee\RS Media Editing Suite directory.

## Personality editor overview

The Personality editor allows you to manage, customize and create personality files for your RS Media. You can use the Personality editor to manage multiple personalities on your computer that you can later upload to your robot.

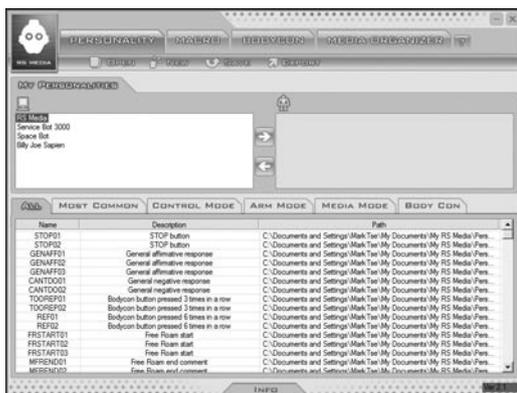


RS Media comes with four pre-installed personalities:

- RS Media (default personality)
- Service Bot 3000
- Billy Joe Sapien
- Space Bot

You can play with the pre-installed personality files on RS Media, or you can customize the pre-installed personality files by modifying or substituting the existing audio files with ones of your choosing. Refer to the Help file for more information.

## Macro editor overview


The Macro editor allows you to create or edit macros or a sequence of macros to create a larger macro function which you can then upload to a Personality. In the RS Media Editing Suite, macros appear as building blocks in the My Macros library, which you can drag and drop into the macro workspace to create the macro function.

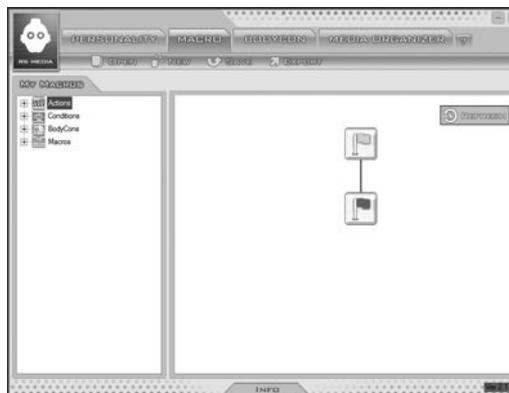

# PROGRAMMING RS MEDIA USING RS MEDIA EDITING SUITE

## BodyCon editor overview


The BodyCon editor allows you to create and customize your own RS Media movements and routines. It also allows you to preview your customized movements and routines in a 3D animation window of RS Media.

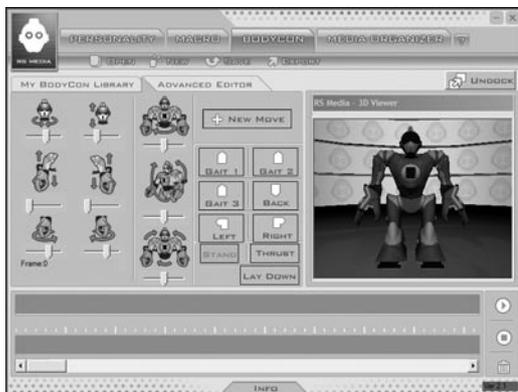

You can create a sequence of movements, add voice and sound effects, and save it as a BodyCon file (\*.bcn). This file can be added to any personality using the Personality Editor, or to a user-created Macro using the Macro Editor. These personalities can then be uploaded to the robot using the Media Organizer.

## Media Organizer overview

The Media Organizer is the gateway between RS Media and your computer. It allows you manage your media by allowing you to upload and download video and audio files, personalities, Java games, and image files between your computer and RS Media.

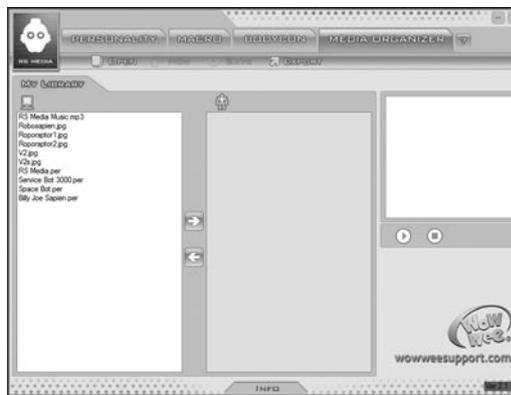

**NOTE:** When you want to transfer files to RS Media from your computer, or vice versa, you must make sure RS Media is ON and that USB mode is enabled.

For more information on the RS Media Editing Suite, refer to the software's Help file, which you can access through the software interface

# MEMORY EXPANSION / USB CONNECTION

RS Media has built in onboard memory on which you can store your media files and personalities. You can expand the memory capacity on RS Media using a SD card (sold separately) in the SD card slot.

## Onboard memory vs. expandable memory

There are two types of memory available on RS Media:


- Onboard memory. Memory that is built-in on RS Media and cannot be removed. There is a total of 42 Mbytes of accessible memory space (about 22 Mbytes free space) in RS Media built-in onboard memory.
- Expandable memory. Memory that you can store on an SD card. You can increase RS Media's memory space by using an SD card in the built-in SD card slot. The maximum size for the SD card is 1 GByte.

**NOTE: When you use an SD card on RS Media, you will not be able to access any data saved on his onboard memory.**

## Using the SD card

To insert the SD card into the SD card slot:

1. Make sure RS Media is turned off.

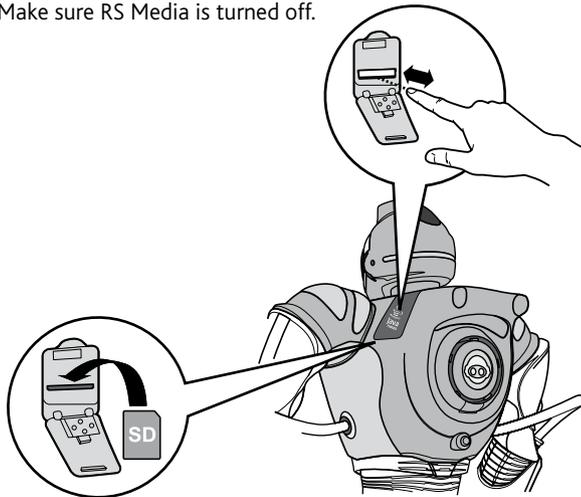

2. Insert the SD card into the slot as illustrated. Push the card into the slot until it is seated properly (the card will click).
3. Reboot RS Media after inserting the SD card.

**NOTE: You cannot directly transfer data between the SD card and RS Media's onboard memory. To transfer any data you have on the SD card onto RS Media's onboard memory, first copy the files you want onto your PC and then remove the SD card from RS Media's SD card slot. Using RS Media Editing Suite, add the data into the RS Media Editing Suite library, and then upload it to RS Media's onboard memory.**

To remove the SD card from the SD card slot:

1. Make sure RS Media is turned off.
2. Push the SD card inwards. The SD card will eject from the SD card slot.
3. Remove the SD card.


## USB connection

You can transfer files from a PC to an SD memory card inserted in RS Media using the USB cable provided. Note that files that can be played are limited to those file formats supported by the system and the Editing Suite software must be used for data transfer.

## Connecting RS Media to a PC using the USB cable

You can connect a USB cable to RS Media and a PC without turning off the power.

1. Connect the USB cable to RS Media and your PC as shown.
2. Select 'USB Mode' from the Options menu on RS Media, and press the Select button.

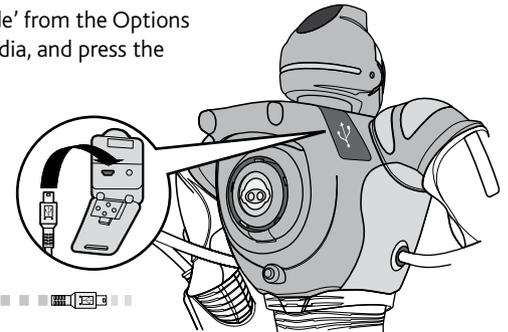

PC

**NOTE: Using an adapter when RS Media is transferring data in USB mode is recommended as low battery levels could result in the loss or corruption of data.**

# PLAYING AUDIO FROM AN EXTERNAL AUDIO SOURCE / CARING FOR YOUR RS MEDIA


## Playing audio from an external audio source

### Using Line In to play Audio

You can play audio from an external audio source through RS Media, just like a speaker system. You must connect an audio cable (not included) from your audio source to the line-in connector, located in his USB compartment. To do so:

1. Connect one end of an audio cable to the line-out or headphone connector of your external audio source.
2. Connect the opposite end of the audio cable (Ø3.5 stereo jack) to the line-in connector, located in the USB compartment.
3. Enable the Line In option in Media Mode, by navigating to the Options folder; select Line In, and then select the ON option.
4. Play your external audio from your external audio source. The audio will be played through RS Media's speakers.

**NOTE:** When you are not using the external audio option, disable the Line In option by setting the option to OFF (see p.37 for details). If the Line In option is enabled when you are not using an external source, RS Media will not play any other audio.

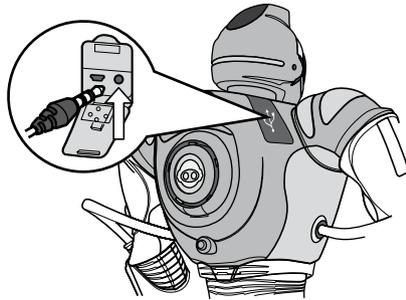

## Caring for your RS Media

This section outlines various precautions, instructions and warnings on caring for your RS Media.

### Precautions

Before using this product, read this manual and retain it for future reference.

### Safety

This product has been designed with the highest concern for safety.

However, note that any electrical device if used improperly has the potential of causing fire, electrical shock or personal injury. To help ensure accident-free operation, you should follow the guidelines outlined below:

### Observe all warnings, precautions, and instructions.

If the device functions in an abnormal manner, produces unusual sounds or odors, or if it becomes hot to the touch, stop use, unplug the AC/DC adapter (if used) from the electrical outlet, and disconnect any other cables to the object immediately.

### Use and handling

- Use in a well-lit area and keep the screen a safe distance from your face.
- Do not use RS Media near water.
- Do not immerse RS Media or any parts of him in water.
- Do not expose RS Media to high temperatures, high humidity, or direct sunlight.
- Do not expose RS Media to dust, smoke or steam.
- Do not allow liquid or small particles to get into RS Media.
- Do not place RS Media on surfaces that are tilted, unstable or subject to vibrations.
- Do not throw or drop RS Media, or subject RS Media to strong physical shock.
- Avoid carrying RS Media by his head. The head contains many sensors and should be handled with care.
- Do not place RS Media close to items with a magnetic strip, such as a credit card.
- Do not give RS Media anything valuable or fragile to hold. He might throw or drop things unexpectedly.
- RS Media will walk best on smooth surface. If he is having difficulty walking on a surface, try changing his gait (the way he walks) for better performance. RS Media responds best to remote controller commands when you are located in front of him. If the controller is behind him, he will not detect commands as well.
- RS Media will set himself in the correct body position for walking. If you try to move his arms with the controller, he will stop walking. If you manually move his arms or waist while he is walking, he will continue to walk but might lose his balance and fall over.
- When you first activate him (turn him on), RS Media will be sensitive to sound, vision and touch input; this is the default setting. This becomes his default setting every time he is activated after a full power down.
- RS Media's infrared vision system uses reflection. This means that he can see highly reflective surfaces such as white walls or mirrors more easily and at greater distances than he can see matte or black surfaces.
- Do not insert items into RS Media's SD memory card slot that are not SD memory cards.

# CARING FOR YOUR RS MEDIA / GLOSSARY

## LCD screen

Red, blue or green spots (bright spots) or black spots (dark spots) may appear in certain locations on the LCD screen. The appearance of such spots is a normal occurrence associated with LCD screens and is not a sign of a malfunction. LCD screens are made using highly precise technology. However, a very small number of dark pixels or continuously lit pixels exist on each screen. Also, a distorted image may remain on the screen for several seconds after the system has been turned off.

Direct exposure to sunlight may damage the system's LCD screen. Be careful when using the system outdoors or near a window. When using the system in a cold environment, you may notice shadows on the graphics or the screen may appear darker than usual. This is not a malfunction, and the screen will return to normal when the temperature goes up.

Do not leave still images displayed on the screen for an extended period of time. This may cause a faint image to be left permanently on the screen.

## Cleaning

For safety reasons, unplug the power cord (if using - not included) from the electrical outlet and remove the batteries from RS Media before cleaning.

### Cleaning the exterior surface

Wipe gently with a damp cloth, and then dry the surface. Do not use solvents or other chemicals to clean the exterior of RS Media.

### Cleaning the LCD screen

Wipe gently with a soft dry cloth.

## Glossary

All RS Media documentation uses certain common terminology to describe components of the RS Media Editing Suite. The following are a few terms you might encounter throughout this manual and other RS Media documentation:

- **BodyCon.** A term used to describe any motion or sequence of motions associated with or without a specific audio file.  
  
In the RS Media Editing Suite, you can create User BodyCons or custom-made BodyCons that you can upload to a Personality or to your library of BodyCons.
- **Gait.** A term to describe a particular way of moving, especially on the ground, such as walking or running.
- **Macro.** A type of short computer program that takes a simple input command and outputs a new set of commands or instructions. RS Media will play the macro back as if he was an actor reading a script.
- In the RS Media Editing Suite, you can create macros to create your own sequence of RS Media movements which you can then save to your My Macros library or to a BodyCon slot in a Personality, and then upload the Personality to your RS Media.

Some macros contain conditions, which can allow more than one possible outcome based upon feedback from the user or the environment.

- **Subroutine.** In programming, a subroutine is a portion of a larger routine that performs a specific task.

Your RS Media is warranted against defects for a period of 180 days.

Wowwee Ltd. warrants to the original consumer purchasers that RS Media ("Product") will be free from defects in material and/or workmanship under normal use for a period of 180 days from the date of purchase. This Warranty is in lieu of all other express or implied warranties which might arise with respect to this Product, including the warranties of merchantability or fitness for a particular purpose. IN ADDITION, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED BOTH FOR PROPERTY AND TO THE EXTENT PERMITTED BY LAW, FOR PERSONAL INJURY DAMAGE. Some states do not allow the exclusion of limitation of incidental and consequential damages.

Should you experience any difficulty with your Product, please return it to the place of purchase, along with an original proof of purchase, and either the original box or the UPC Code label from the box. You will receive a replacement for the Product, or be issued a refund for the purchase of the Product in the event a replacement is not available at the place of purchase. Note that this warranty is automatically void for any hardware modifications (including tampering or disassembly), accidental damage, damage outside what is considered normal use, or abuse.

This warranty does not cover any hardware, software or other add-on components installed by the end-user.

Valid only in U.S.A.

## FAQs

If you have questions or issues with your RS Media, take some time to go through the following list of frequently asked questions.

**Q.** *My RS Media sometimes does not respond to controls.*

**A. Low battery**

If RS Media is not responding well to controller commands, you might need to replace the controller batteries (3 X "AA" size).

If you do not notice any improvement in response after changing the batteries in the controller, replace all the batteries in RS Media.

**IR sensor on the controller must point directly to IR sensor on RS Media's head**

RS Media's Infrared vision does not function while he is walking backwards or turning, and may result in him bumping into things. To make sure he responds to commands, point the controller towards the front of his head, where the sensor is located.

**Q.** *When I plug my headphones into to RS Media, they do not seem to work.*

**A. RS Media does not have an output jack**

RS Media only supports a stereo input jack and not a headphone jack. This means that you can plug your RS Media to a computer or an MP3 player and use him as a stereo output (like speakers).

To do this, switch to Media Mode and select Options. Select the Line-in option and set it to ON. Any audio media you play from the source will now be output through RS Media.

**Q.** *I cannot install the CD that came with my robot.*

**A. Does not meet system requirements**

Your PC must meet the minimum system requirements in order to install the CD. These minimum requirements are listed in the User Manual provided with your RS Media.

**Q.** *My RS Media won't take my picture and says "Flash memory full".*

**A. SD Card full, might need to delete/transfer some data**

RS Media will say "Flash memory full" when the SD Card inserted has no more memory capacity left. You must delete or transfer some data such as audio, images or video off the SD Card. You can delete files while in Media Mode, or if you want to save your data, transfer the data to your PC using a USB connection. Furthermore, you can also power down your RS Media, remove the full SD Card and replace it with an empty one. Recommended size of SD Card is 1GByte.

## Support

For an updated list of troubleshooting tips or frequently asked questions, visit the RS Media support site at [www.wowweesupport.com](http://www.wowweesupport.com).

# INDEX

- B—**
  - batteries, 8
    - installing, 8
    - remote controller, 9
  - blinking, 45
  - BodyCon
    - definition, 56
  - BodyCon editor, 53
- C—**
  - camera, 43-45
  - camera settings
    - white balance, 45
  - color recognition, 44
- E—**
  - external audio source, 55
- F—**
  - features, 10
  - flinch, 43
  - foot sensors, 42
  - frequently asked questions, 57
- G—**
  - gait
    - definition, 56
  - gaits
    - walking gaits, 12
  - games, 34-36
    - controls, 34
  - glossary, 56
  - grip sensors, 42
  - Guard mode, 45,50
- H—**
  - hand controls, 15
  - handling RS Media, 55
  - help file, 52
- I—**
  - infrared vision, 43
    - close-range, 43
    - long-range, 43
- L—**
  - LCD screen, 11, 56
  - line-in, 55
- M—**
  - macro
    - definition, 56
  - Macro editor, 52
  - media formats, 26
  - Media mode
    - Audio menu, 27
    - Games menu, 34
    - Options menu, 37
    - Personality menu, 33
    - Photo menu, 29
    - Video menu, 31
  - Media Organizer, 53
  - memory expansion, 54
- O—**
  - objects
    - color tracking, 44
    - disappearing, 44
    - tracking, 44
  - obstacles, 44
- P—**
  - package contents, 3
  - personalities, 52
  - Personality editor, 52
  - photos, 29
    - browse, 29
    - delete, 29
    - take, 29
    - options, 29
  - slideshow, 29
  - timer, 29
  - power down, 11
  - powering RS Media, 11
  - precautions, 55
  - programming
    - using RS Media Editing Suite, 51
  - programming modes, 47
    - Main Program mode, 49
    - Puppet mode, 48
    - Sound, 49
    - Vision, 49
- R—**
  - remote controller
    - overview, 14
  - robot interaction, 46
    - Robopet, 47
    - Roboraptor, 46
    - Robosapien V2, 46
    - Roboreptile, 46
  - RS Media Editing Suite, 47, 51-53
- S—**
  - safety, 55
  - SD card
    - inserting, 54
    - removing, 54
    - using, 54
  - sensors, 11
    - foot, 42
    - grip, 42
    - tilt, 42
  - Sleep mode, 11
  - software, 51
    - installing, 51
    - running, 51
  - subroutine
    - definition, 56
  - subroutines, 49
  - guard, 50
  - positional, 50
  - sound, 49
  - vision, 49
  - support, 57
- T—**
  - tilt sensors, 42
  - tracking
    - timeout, 44
- V—**
  - videos, 31
    - browse, 31
    - delete, 31
    - take, 31
  - vision
    - toggle on/off, 43
- W—**
  - warranty, 57
  - white balance, 44, 45



#### CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### NOTE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular Installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING!** This equipment may experience difficulty and/or memory loss when subjected to any electrostatic discharge, radio frequency interference, or sudden power surge/interruption . The user is encouraged to reset the equipment should any of these occur.

**WowWee**®



Manufactured and distributed by © 2006 Wowwee Ltd. All Rights Reserved.

Wowwee Limited *Asia Office* - Unit 301A-C, 92 Granville Rd, T.S.T. East, Hong Kong  
Wowwee Group *North America Office* - 6600 Decarie, Suite 200, Montreal, QC H3X 2K4, Canada

Consumer Hotline: 1-800-310-3033 Email: support@wowwee.com

www.wowwee.com  
www.rsmediaonline.com

**8061US03FLA**