

ROBOS FRIENDS™
RSblue

Item No. 8015

User Manual



Introduction

 
Congratulations on choosing the **Robosapien Blue™**, a sophisticated fusion of technology and personality. With a full range of dynamic motion, interactive sensors and a unique personality, Robosapien Blue™ is more than a mechanical companion; he's a multi-functional, thinking, feeling robot with attitude!

Explore Robosapien Blue™'s vast array of functions and programs. Mold his behavior any way you like.

Be sure to read this manual carefully for a complete understanding of the many features of your new robot buddy.

Product Contents:

- Robosapien Blue™ x1
- Infra-red Remote Controller x1
- Pick Up Accessory x1

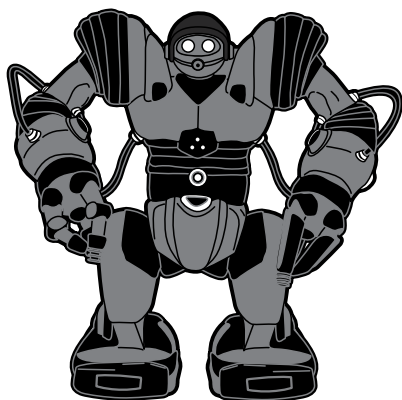

Robosapien Blue™




















Remote Controller



Pick Up Accessory

For more information visit: www.wowwee.com



	Introduction & Contents	P.1-2
	Battery Details	P.3
	Robosapien Blue™ Overview	P.4
	Robosapien Blue™ Operation Overview	P.5
	Controller Index	P.6
	RED Commands - Upper Controller	P.7
	RED Commands - Middle & Lower Controller	P.8
	GREEN Commands - Upper Controller	P.9
	GREEN Commands - Middle & Lower Controller	P.10
	ORANGE Commands - Upper Controller	P.11
	ORANGE Commands - Middle & Lower Controller	P.12
	Programming Mode - Touch Sensors	P.13
	Programming Mode - Sonic Sensor	P.14
	Programming Mode - Master Command	P.15
	Troubleshooting Guide	P.16
	Warranty	P.17
	App Functionality	P.19



 
Battery Detail

BATTERY REQUIREMENTS:

Your robot is powered by 4 x "D" size Alkaline batteries (2 batteries in each foot - not included).
Your remote controller is powered by 3 x "AAA" batteries (not included).

BATTERY INSTALLATION:


- Be sure the robot power button is in the OFF position (OUT) before installing or changing batteries.
- Remove the battery covers with a Phillips/crosshead screwdriver as shown (not included).
- Install recommended batteries as shown, making sure battery polarity is correct (batteries not included).
- Replace battery doors and carefully tighten all screws.

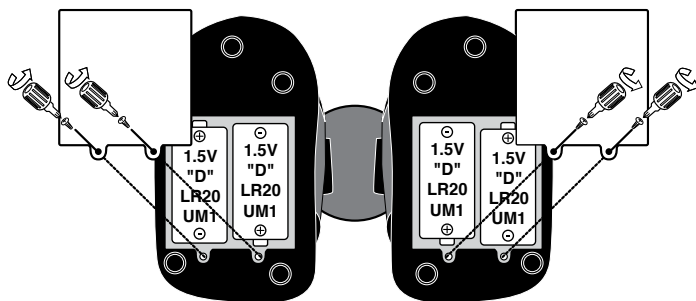

Robosapien Blue™ : Base of feet

IMPORTANT BATTERY INFORMATION:

 - Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries [standard (Carbon-Zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Remove rechargeable batteries from the toy before recharging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Please respect the correct polarity, (+) and (-).
- Do not try to recharge non-rechargeable batteries.
- Do not throw batteries into the fire.
- Replace all batteries of the same type/brand at the same time.
- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults.
- Remove batteries if the toy is not going to be played with for some time.

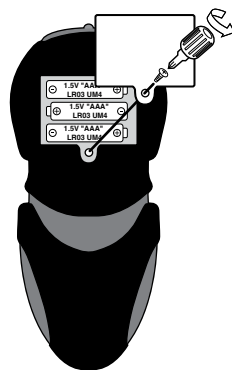

**Remote Controller:
Bottom view**

LOW BATTERY INDICATORS:

When Robosapien Blue™'s batteries grow weak, your Robosapien Blue™ will move and walk very slowly.

- When this occurs, power robot OFF and replace all batteries.

When the remote controller's batteries grow weak, the indicator light will shine very dimly.

- When this occurs, replace all the batteries in the remote controller.

NOTE

- Robot will just stop when battery power gets VERY low. Power off and replace all batteries.
- Some lighting or sunlight can interfere with infra-red signals.



Robosapien Blue™ Overview

1. Infra-Red Receiver

Always point the Controller towards Robosapien Blue™'s head.

2. Eye Lights

Blink and move when he executes a command. Look in Robosapien Blue™'s eyes to see what he is "thinking".

3. Sonic Sensor

Senses sounds when in LISTEN mode.

6. Palm Lights

(Both hands)

Light up when you move an arm or when you press STOP.

5. Hand Sensors

(Both hands)

Sense touch at the tips of the longest fingers.

4. Foot Sensors (Both feet)

Sense any touch to the front or back of the foot.



NOTE: Always point the Controller at Robosapien Blue™'s head.

 


Robosapien Blue™ Operation Overview

Robosapien Blue™ has 67 easy to access command functions.

The command functions feature: Direct Control, Combination Actions, Actions with Attitude, Demo Modes and Programming mode to build your own dynamic sequence of motions!

Explore the unique multi-level remote control for hours of fun and action!

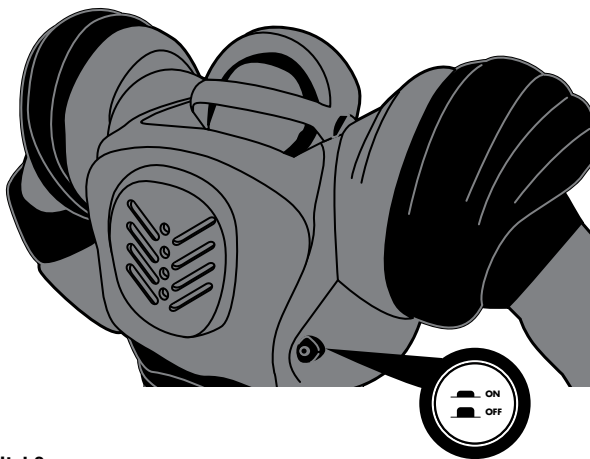

Where is Robosapien Blue™'s power switch?

- The power switch is located on the robot's back, below the right shoulder blade.
- Press once to turn ON. Robosapien Blue™ will awaken with a yawn, a stretch and then say "Uh-huh." Robosapien Blue™ is now ready for your commands.

How do I access the levels of commands on the Controller?

- By using the SELECT button! The Select button works just like the CAPS LOCK on a computer keyboard. Every controller button can do at least three different things. Pressing the Select button once (controller displays a green light) activates all the GREEN commands on the remote. Pressing the Select button twice (controller displays an orange light) activates all the ORANGE commands.

What are the RED command buttons for?

- The red commands on the upper sections of the controller directly control Robosapien Blue™'s movements (arms and legs). For further information see page 7.
- The red commands on the lower section of the controller are used for programming your Robosapien Blue™ - for detailed information see page 13 to 15.

What are the GREEN command buttons for?

 
- The green commands on the upper sections of the controller execute combination actions (Pick Up, Throw). For further information see page 9.
- The green commands on the lower section of the controller execute your Programmed sequences - for detailed information see page 13 to 15.

What are the ORANGE command buttons for?

- The orange commands on the upper sections of the controller access "attitude actions" (ie., "High 5", "Burp"). For further information see page 11.
- The orange commands on the lower section of the controller execute three pre-programmed demo sequences - for detailed information see page 12.



Controller Index

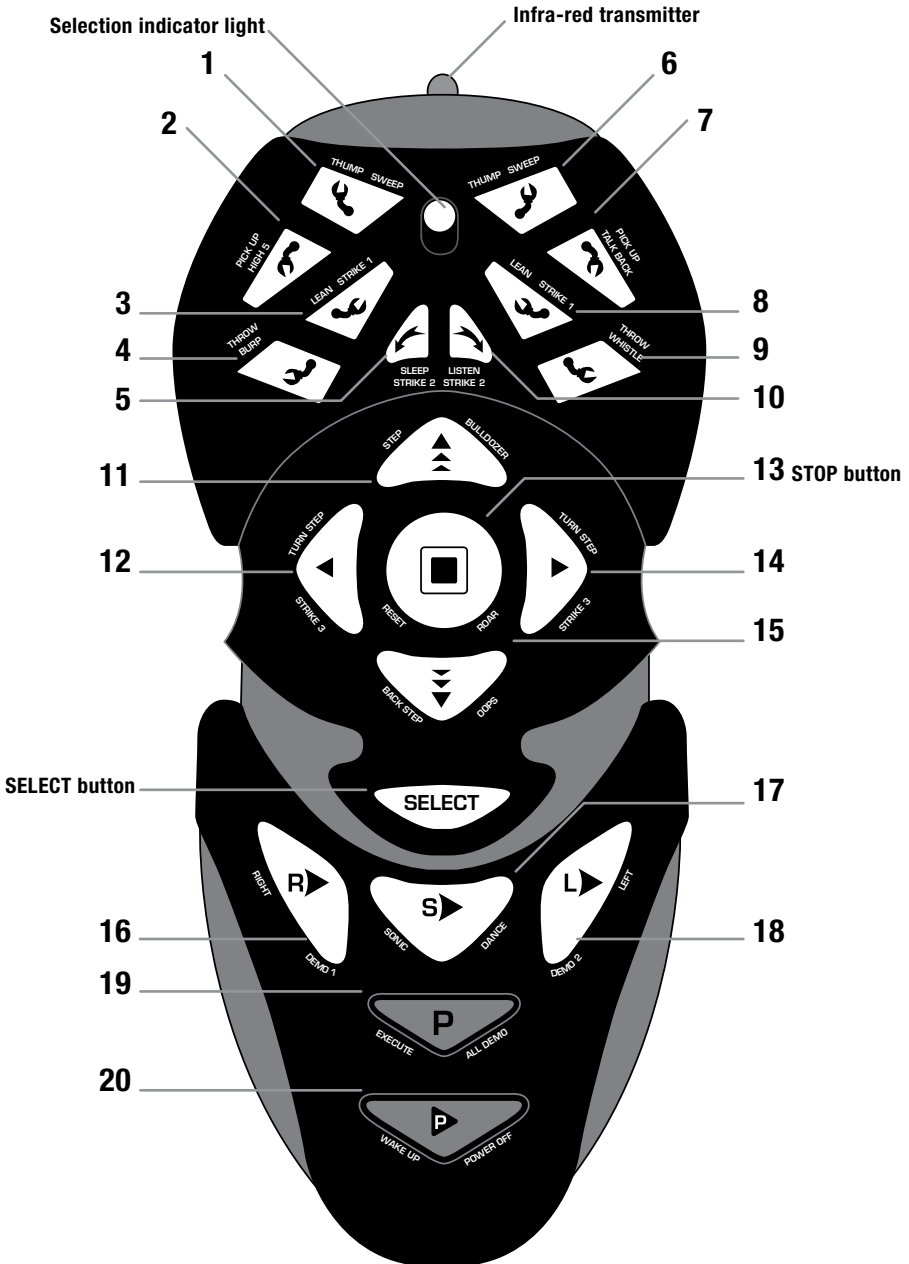

NOTE: The LEFT side of the Controller operates Robosapien Blue™'s RIGHT side; the RIGHT side of the Controller operates Robosapien Blue™'s LEFT side.

 


Red Commands

Upper Controller


Red Commands directly control Robosapien Blue™'s movements.

1 RIGHT ARM UP

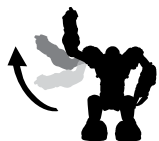


- Press twice to fully raise arm up.

 2 RIGHT ARM DOWN

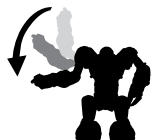

- Press twice to fully lower arm down.

 3 RIGHT ARM IN



- Press twice to fully turn arm inwards.

4 RIGHT ARM OUT



 
- Press twice to fully turn arm outwards.

5 TILT BODY RIGHT




- Press once to tilt body to the right.

6 LEFT ARM UP

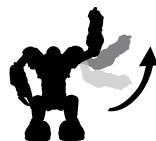

- Press twice to fully raise arm up.

 7 LEFT ARM DOWN

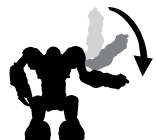

- Press twice to fully lower arm down.

8 LEFT ARM IN



- Press twice to fully turn arm inwards.

9 LEFT ARM OUT

 
 


- Press twice to fully turn arm outwards.

10 TILT BODY LEFT




- Press once to tilt body to the left.

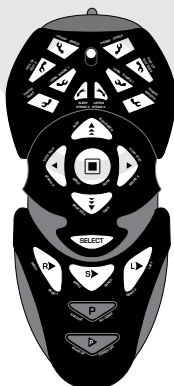
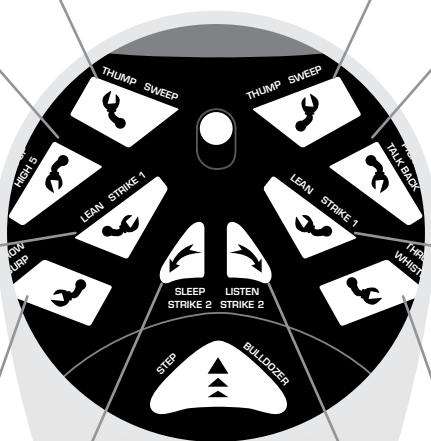


Red Commands

 Middle & Lower Body

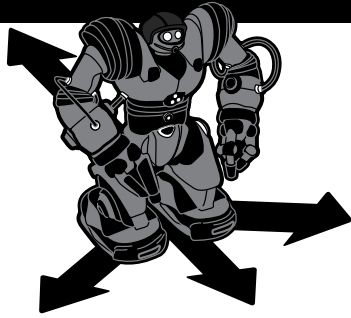

  - For best performance, use on flat surfaces or low carpet.
- Shag carpeted surfaces may limit the walking function slightly.

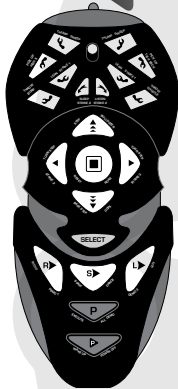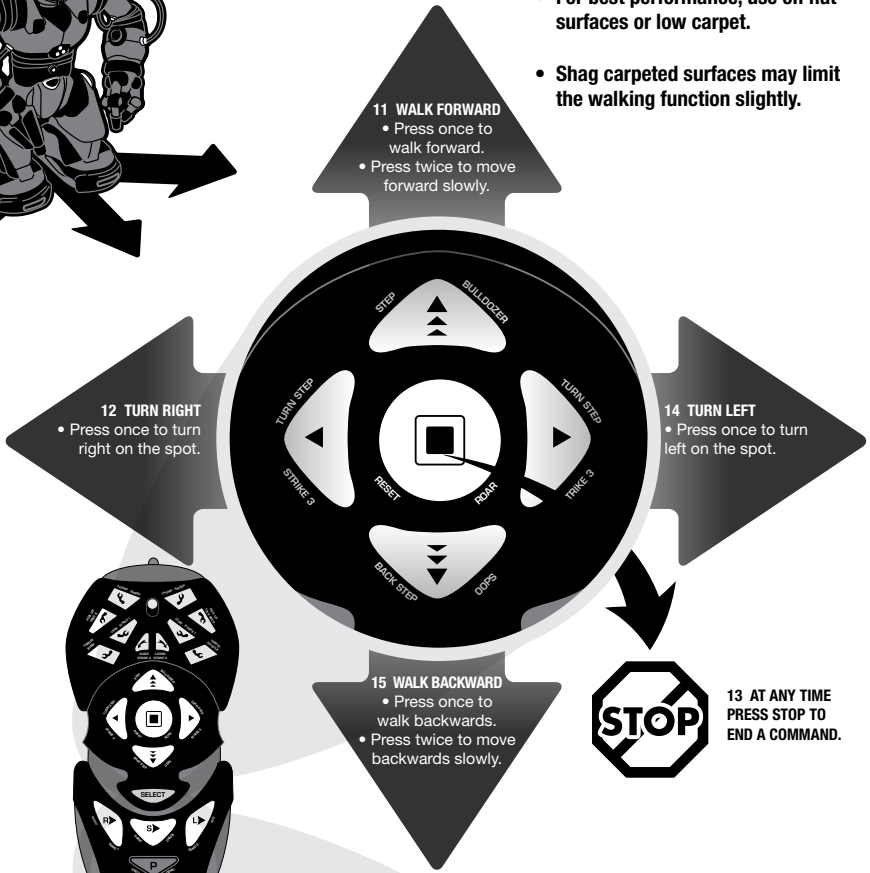

13 AT ANY TIME PRESS STOP TO END A COMMAND.

16 Right Sensor Program

 
Select Button

18 Left Sensor Program

19 Master Command Program

17 Sonic Sensor Program

20 Program Play

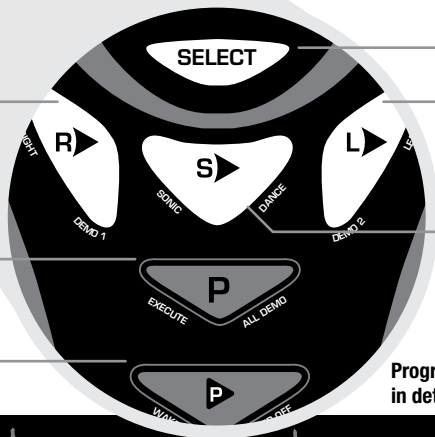

Programming is covered in detail on page 13-15.



Green Commands

Upper Controller

Green Commands access combination actions.

 


To access the Green Commands, first press the Green Commands, first press the **SELECT** button once. The GREEN indicator light will LIGHT AND HOLD to confirm the selection.

1 RIGHT HAND THUMP

- Robosapien Blue™'s right arm lifts and presses downward.

2 RIGHT HAND PICK UP

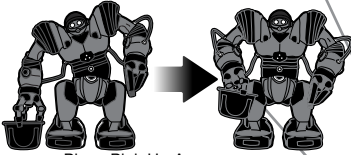


- Place Pick Up Accessory next to Robosapien Blue™'s right foot (see diagram) and he'll pick it up!

6 LEFT HAND THUMP

- Robosapien Blue™'s left arm lifts and presses downward.

 7 LEFT HAND PICK UP

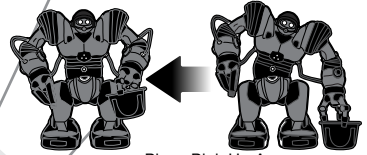

- Place Pick Up Accessory next to Robosapien Blue™'s left foot (see diagram) and he'll pick it up!

3 LEAN BACKWARD

- Robosapien Blue™ leans backward and opens his arms!

4 RIGHT HAND THROW

- If an object is already in Robosapien Blue™'s right hand, press Throw and he'll toss it!

5 SLEEP

- Robosapien Blue™ goes to sleep (all sensors are inactive). Press STOP or WAKE UP to wake him up (see page 10). After approx. 2 hours of uninterrupted sleep, he'll power himself off to save energy.

8 LEAN FORWARD

 
 
- Robosapien Blue™ leans forward and opens his arms!

9 LEFT HAND THROW

- If an object is already in Robosapien Blue™'s left hand, press Throw and he'll toss it!

10 LISTEN

- Robosapien Blue™ responds to a sound or tap on his body with a default grunt, or a Sonic Sensor Program sequence programmed by you. See Programming on page 14 for further details.

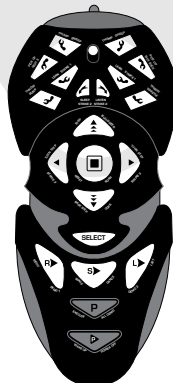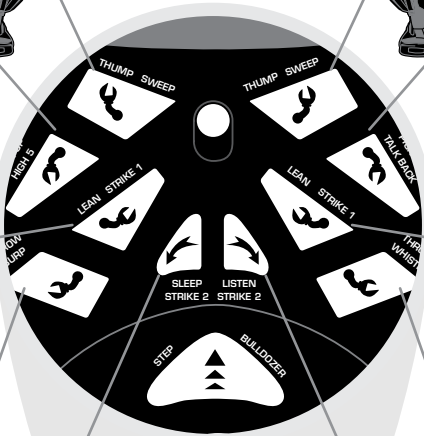

12 RIGHT TURN STEP

- Rotates Robosapien Blue™ 45 degrees to the right.

11 FORWARD STEP

- Robosapien Blue™ takes two steps forwards.

13 RESET

- Resets Robosapien Blue™ to his original Default position

15 BACKWARD STEP

- Robosapien Blue™ takes two steps backwards.

14 LEFT TURN STEP

- Rotates Robosapien Blue™ 45 degrees to the left.

16 Right Sensor Program Execute

- Plays right sensor routine.
- See Programming Mode - touch sensors, page 13.

SELECT BUTTON

- Place once to access GREEN Commands, press twice to access ORANGE Commands.

19 Master Command Program Execute

- Plays program routine.
- See Programming Mode - master command, page 15.

18 Left Sensor Program Execute

 
 
- Plays left sensor routine.
- See Programming Mode - touch sensors, page 13.

20 Wake Up

- Robot goes through his wakeup routine.

17 Sonic Sensor Program Execute

- Plays sonic routine.
- See Programming Mode - sonic sensor, page 14.

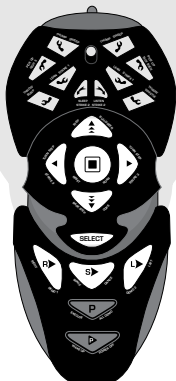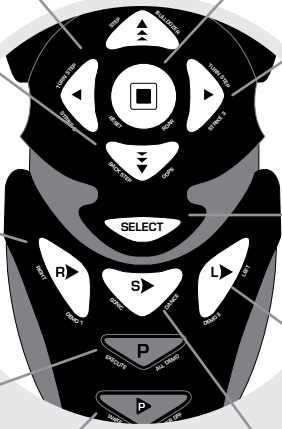

Orange Commands

Upper Controller

Orange Commands access actions with attitude.

ORANGE LIGHT



To access the ORANGE Commands, press the **SELECT** button TWICE. The orange indicator light will **LIGHT AND HOLD** to confirm the selection.

1 RIGHT HAND SWEEP

- Knock things forward with a sweeping arm and waist action!

6 LEFT HAND SWEEP

- Knock things forward with a sweeping arm and waist action!

2 HIGH 5

- Robosapien Blue™ stretches up for a big High 5 and says "Aaayh!"

7 TALK BACK

- Grunts and gestures. Robosapien's X™ quote the conversationalist.

3 RIGHT HAND STRIKE 1

- Robosapien Blue™ performs an inside strike with a mighty "Hoy-yah!"

8 LEFT HAND STRIKE 1

- Robosapien Blue™ performs an inside strike with a mighty "Hi-yah!"

4 BURP

- High technology doesn't mean better table manners!

9 WHISTLE

 
 
- Listen to that crazy Wolf Whistle! Nice software.

5 RIGHT HAND STRIKE 2

- An open hand strike with a powerful "Hi-yah, 'oOOo".

10 LEFT HAND STRIKE 2

- An open hand strike with a powerful "Hoy-yah, 'oOOo".

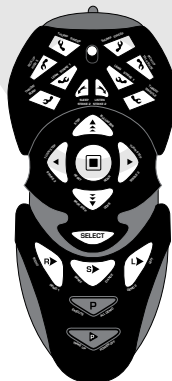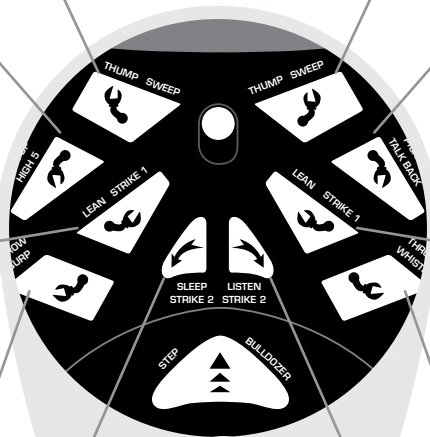

12 RIGHT HAND STRIKE 3

- Robosapien Blue™ performs an outside strike.

11 BULLDOZER

- Pushes forward 8 steps. Better not get in his way!

13 ROAR

- Robosapien Blue™ lifts both arms and roars!

15 OOPS!

- Oop's, you'll have to excuse him. It must be something he ate!

14 LEFT HAND STRIKE 3

- Robosapien Blue™ performs an outside strike.

16 DEMO 1

- Robosapien Blue™ comes out Karate chopping!

SELECT BUTTON

- Place once to access GREEN Commands, press twice to access ORANGE Commands.

19 ALL DEMO

- All 3 pre-programmed DEMOs play in a row.

18 DEMO 2

 
 
- The ultimate in attitude!

20 POWER OFF

- Robosapien Blue™ completely Powers Off. To reactivate him, press the ON/OFF button (located on Robosapien Blue™'s back) twice.

17 DANCE DEMO

- Robosapien Blue™ shows off his dance prowess..... and he's got the moves!

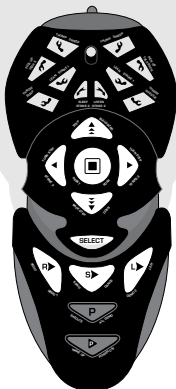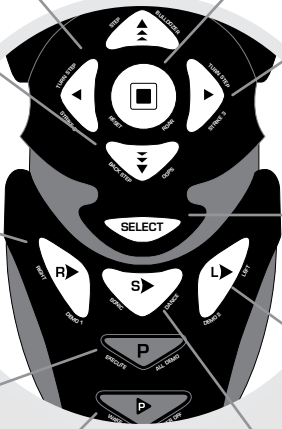

Programming Mode

Touch Sensors

Robosapien Blue™ has three programmable sensors and a Master program, that allows you to take control of the following unique programming environments:

1 Right Sensor Program () #16

2 Left Sensor Program () #18



 



3 Sonic Sensor Program () #17

4 Master Program () #19

Touch Sensors


The sensors on Robosapien Blue™'s Fingers, Toes and Heels can all be programmed to respond when touched. They also trigger whenever he walks into an obstacles.

Right & Left Sensor Programs

- Ensure the Controller is in normal mode (indicator light on Controller is DARK).
- Press the Right or Left Sensor Program button once (Robosapien Blue™ beeps - you are now in program mode).
- Program up to six steps (the Select button does not count as step). For example:
Walk Forward, Right Arm Out, Left Arm Out, ( ,  , ROAR), Tilt Body Right, Tilt Body Left.
- Robosapien Blue™ will now automatically repeat your programmed sequence.
- If you wish to program less than six steps, you need to 'close' the program by pressing **PROGRAM PLAY** () once, after you've completed your selection - for example:
Walk Forward, Turn Right, ( , ) High 5, PROGRAM PLAY ().
- To trigger the sensor, touch a long finger, or a toe/heel sensor (on the side corresponding to the sensor program you set). Alternatively press SELECT once (GREEN command mode), followed by **R>** or **L>** Sensor Program Execute (depending on which side has been programmed) and he'll also run through the routine.

Clearing the Program/Holding the Program

 - To clear the program and return to the Default program, press the Right, or Left Sensor Program button once, followed by the Program Play button and the program will clear.
- Turning Robosapien Blue™ off will also clear any previously set programs.
- Use the Sleep function to hold the program in Robosapien Blue™'s memory for up to two hours.

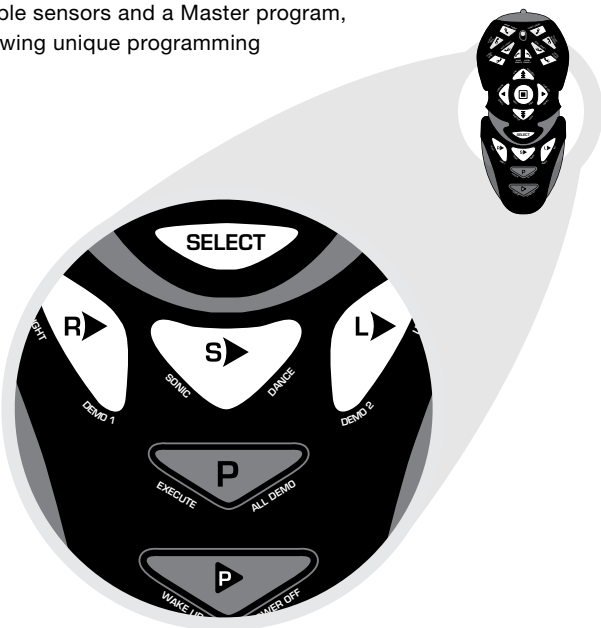


Robosapien Blue™ can be set up as a “room guard” or can even start dancing to your favorite music using the built-in Sonic Sensor Program function.



Sonic Sensor Programs

a Ensure the Controller is in the normal Command mode (indicator light on the Controller is DARK).

 
b Press the Sonic Sensor Program button () once; Robosapien Blue™ says “BEEP!”. You are now in program entry mode.


c Program up to SIX steps (the SELECT button does not count as a step).

- For example:

WALK FORWARD, RIGHT ARM OUT, STOP, ( ,  - ROAR), TILT BODY RIGHT, TILT BODY LEFT.

After six steps, Robosapien Blue™ will automatically repeat your programmed sequence so you can check what it will do.

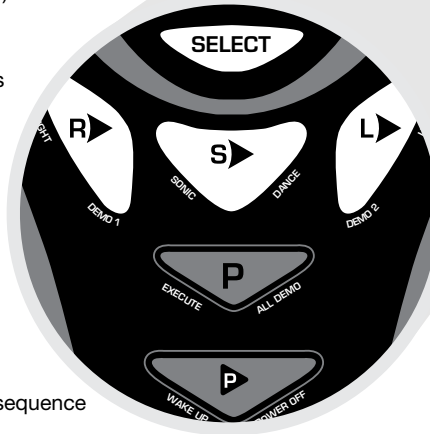

d If you wish to program less than six steps, you need to ‘close’ the program by pressing **PROGRAM PLAY** () after you’ve completed your selection - for example:

WALK FORWARD, ( ,  - HIGH 5), WALK BACKWARDS, PROGRAM PLAY.

 
 
e To review your program again, press SELECT once (Controller indicator light goes GREEN), followed by Sonic Sensor button. Robosapien Blue™ will run through your routine.

f To put Robosapien Blue™ into SONIC RESPONSE mode, press SELECT followed by LISTEN. He’ll now wait for a sharp sound or tap on his body, then run through your programmed routine.

Clearing the Program/Holding the Program

a To clear the sonic program and return to the Default program, press the Sonic Program button once, then **PROGRAM PLAY**.

b Turning Robosapien Blue™ off will also clear any previously set programs.

c Use the Sleep function ( , ) to hold the program in Robosapien Blue™’s memory for a up to two hours.







Programming Mode

 
Master Command

A main feature of the Robosapien Blue™ is that he can be programmed in segments. The 14 step Master Program can “link in” any 6-step Sensor Program for long play routines.



Master Programs

 

 
 

 
- a Ensure the Controller is in the Red Command mode (indicator light on the Controller is DARK).
- b Press the **MASTER PROGRAM** () button once; Robosapien Blue™ says “Beep”. You are now in program entry mode.
- c Program up to fourteen steps (the SELECT button does not count as a step - see Touch Sensors page 13 for example).
- d After 14 steps, the Robosapien Blue™ will automatically execute your **Master Program** sequence.
- e If you wish to program less than fourteen steps, you need to ‘close’ the program by pressing **PROGRAM PLAY** ().
- for example: **Walk Forward, Turn Right, Walk Forward, Turn Left, Walk Backward, ( ,  , High 5), Program Play.**
- f To execute your program at any time, press **PROGRAM PLAY**.
- g To execute your program without linking in the sensor programs (so you can quickly review your Master Program sequence), press SELECT, then **MASTER PROGRAM**.

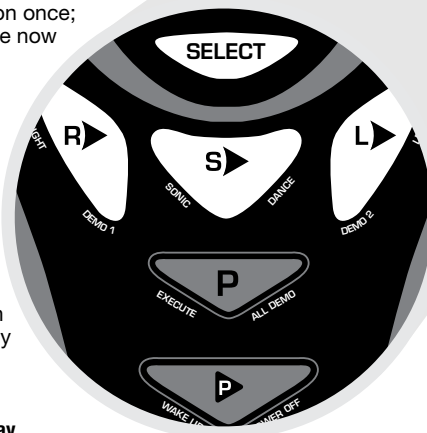

Clearing the Program/Holding the Program

- a To clear the **Master Program**, press the **MASTER PROGRAM** button once, then press the **PROGRAM PLAY** Button. The robot goes “OUAH!” to confirm the program is cleared.
- b Turning Robosapien Blue™ off will also erase any **Master Programs**.
- c If you wish to keep your program, use the Sleep function (SELECT-SLEEP) to hold the program in Robosapien Blue™’s memory for up to two hours.



Extending the Program

- a You can extend the length of the Master Command Program beyond fourteen steps by “linking in” any of the three Sensor Programs. Sensor Programs can be mixed and matched in any pattern.
- b First pre-program any Sensor Program with a routine (see previous pages 13 & 14).
- c Press **Master Program** to enter your program as normal. Press SELECT then press any **R>**, **S>**, or **L>** buttons. This sensor routine will be stored as ONE STEP in your master program. Repeat to add additional sensor routines. On playback, those routines will play with no pause between execution.
- d To enter a Master Program so that the robot waits for each sensor input, enter your program as normal then just press either **R>**, **S>**, or **L>** as one step. On playback, the robot will STOP at the beginning of each sensor routine waiting for either a sensor touch or sound.
For example: **WALK FORWARD, WALK BACKWARD, ( - R>), R>, ( ,  - STOP), ( - L>), L>, STOP, ( - S>), LEFT ARM UP, ( - S>), S>, S>, **PROGRAM PLAY**.**



Troubleshooting Guide

If you are experiencing difficulties with Robosapien Blue™, use this troubleshooting guide.

Problem	Solution
1. Robosapien Blue™ is not responding to the controller.	a. Stand robot upright, clear all obstacles from the feet and hand sensors, then push Robosapien Blue™'s ON/OFF button until you hear the yawning power up sequence.
	b. For best results keep a clear line of sight between the remote and the infra-red receiver in the Robosapien™'s head. Always point the controller directly at the head and stay within 12 feet (3 meters) distance.
	c. Check that batteries are inserted correctly and that nothing comes between the batteries and battery contacts.
	d. Robosapien Blue™ might be in PROGRAM MODE (“Beep, beep, beep”). Press the PROGRAM PLAY button at the very bottom of the remote, then STOP to restore regular operation.
	e. Certain types of electronic lighting or bright sunlight can jam infra-red signals from reaching your robot. Lower the robot's sun visor or, if the problem persists, move the robot into shadow or away from the interference.
	f. The robot will ignore remote control signals during his wakeup routine. Wait until the wakeup routine finishes, then he will respond as normal.
2. Robosapien Blue™ has trouble walking.	a. The hand or feet sensors detect objects in front or back. Use the BULLDOZER walking mode (press SELECT twice, then BULLDOZER) or SELECT-STEP or SELECT-BACKSTEP to move the robot away from the obstruction.
	b. Robosapien Blue™ may have difficulty walking on thick carpets or slippery surfaces. For best results only use your Robosapien Blue™ on flat, level surfaces (low pile carpets or hard floors).
	c. Something is stuck on the robot's feet. Check that nothing is caught or preventing his footpads, legs, or hands from moving freely.
	d. Press <  > again (or press <  > twice if stopped) to enter SLOW WALK mode, which is much more stable.
3. Robosapien Blue™ does not detect sounds in Listen Mode.	a. Wait two seconds after LISTEN MODE activates before making sounds or tapping the robot's body.
	b. Robosapien Blue™ does not hear sounds that are soft or low-pitched. Make a sharp sound (eg. clapping your hands), or tap Robosapien™'s body. Robosapien Blue™'s limbs are not moving the way I want.
4. Robosapien Blue™'s limbs are not moving the way I want.	a. Robosapien Blue™'s arms and legs move to multiple positions. When a limb is fully extended, use several button presses to find new positions.
	b. Reset the Robosapien Blue™ to the default position. Press SELECT then the RESET (STOP) button.
5. Robosapien Blue™ is behaving erratically.	a. Press the STOP button twice, or turn Robosapien Blue™ off and back on again.
	b. Batteries are very low. Replace all batteries in the feet with fresh “D” batteries.
	c. Something is interfering with the infra-red signals. Move the controller closer to the robot, or move the robot to another location under different lighting.



WowWee™ 90-Day Limited Warranty

WowWee's warranty obligations for Robosapien Blue™ (this "Product") are limited to the terms set forth below.

WowWee Group Limited ("WowWee") warrants to the original end-user purchaser that this Product will be free from defects in materials and workmanship under normal use for a period of 90 days from the date of retail purchase (the "Warranty Period"). This warranty is extended only to the original end-user purchaser of a new product that was not sold "as is".

If a defect arises:

(1) you may within 30 days from the date of retail purchase (or such other period specified by the return policies of the place of purchase) return this Product to the place of purchase, together with the original proof of purchase and either the original box or the UPC code label from the box, and this Product will be replaced or, in the event that a replacement for this Product is not available at the place of purchase, either a refund of the purchase price for this Product or a store credit of equivalent retail value will be provided; or

(2) you may after the day that is 30 days from the date of retail purchase (or such other period specified by the return policies of the place of purchase) and within the Warranty Period contact WowWee Customer Support to arrange for the replacement of this Product. In the event that a replacement for this Product is not available this Product will be replaced by WowWee with a product of equivalent or greater retail value.

Notwithstanding the foregoing terms of this warranty, WowWee reserves the right at all times, at its sole option and discretion, to refund to you the purchase price paid by you for this Product in full and final settlement of WowWee's obligations under this warranty.

A purchase receipt or other proof of the date of retail purchase and purchase price is required in order to claim the benefit of this warranty.

If this Product is replaced, the replacement product becomes your property and the replaced Product becomes WowWee's property. If the place of purchase refunds the purchase price of this Product or issues a store credit of equivalent retail value, this Product must be returned to the place of purchase and becomes WowWee's property. If WowWee refunds the purchase price of this Product, this Product must be returned to WowWee and becomes WowWee's property.

EXCLUSIONS AND LIMITATIONS

This warranty covers the normal and intended use of this Product. This warranty does not apply: (a) to damage caused by accident, abuse, unreasonable use, improper handling and care or other external causes not arising out of defects in materials or workmanship; (b) to damage caused by service performed by anyone who is not an authorized representative of WowWee; (c) to any hardware, software or other add-on components installed by the end-user; (d) if this Product has been disassembled or modified in any way; (e) to cosmetic damage, including but not limited to scratches, dents or broken plastic, or normal wear and tear.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MIGHT ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. WOWWEE'S RESPONSIBILITY FOR PRODUCT DEFECTS IS LIMITED TO THE REPLACEMENT OF THIS PRODUCT OR THE REFUND OF THE PURCHASE PRICE FOR THIS PRODUCT. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN TIME TO THE TERM OF THIS LIMITED WARRANTY. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE EXPIRATION OF THE LIMITED WARRANTY PERIOD. If any term of this warranty is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW, WOWWEE IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES HOWSOEVER CAUSED RESULTING FROM BREACH OF WARRANTY OR CONDITION OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOSS OF USE. THE FOREGOING LIMITATION SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR OMISSIONS.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THESE LIMITATIONS MIGHT NOT APPLY TO YOU.

Valid only in U.S.A.



ROBOSAPIEN



WowWee Group Limited.
Energy Plaza, 3/F, 301A-C,
92 Granville Road,
T.S.T. East, Hong Kong.

WowWee Canada Inc.
3700 Saint Patrick Street
Suite 206
Montreal, QC, H4E 1A2
Canada

Manufactured and distributed by
© 2004-2014 WowWee Group Limited.
Product names, designations, and logos
are trademarks or registered trademarks
of WowWee Group Limited.
All rights reserved.

Customer Service Website:
www.wowweezone.com

We recommend that you retain our
address for future reference.

Product and colors may vary.

Packaging printed in China.

WARNING! This product is
not suitable for children under
3 years because of small parts - choking
hazard.

Apple, the Apple logo, iPhone, iPad,
iPad mini, iPad Air, and iPad touch are
trademarks of Apple Inc., registered in the
U.S. and other countries. App Store is a
service mark of Apple Inc., registered in
the U.S. and other countries.

Android and Google Play are trademarks
of Google Inc.

Amazon and Amazon Appstore are
trademarks of Amazon.com, Inc.

MADE IN CHINA.

CAUTION

Changes or modifications not expressly
approved by the party responsible for
compliance could void the user's authority
to operate the equipment.

NOTE

This equipment has been tested and
found to comply with the limits for a class
B digital device, pursuant to part 15 of
the FCC rules. These limits are designed
to provide reasonable protection against
harmful interference in a residential
installation. This equipment generates,
uses and can radiate radio frequency
energy and, if not installed and used in
accordance with the instructions, may
cause harmful interference to radio
communications.

However, there is no guarantee that
interference will not occur in a particular
installation. If this equipment does cause
harmful interference to radio or television
reception, which can be determined by
turning the equipment off and on, the
user is encouraged to try and correct
the interference by one or more of the
following measures:

- Reorient or relocate the receiving
antenna
- Increase the separation between the
equipment and receiver
- Connect the equipment into an outlet
on a circuit different from that to
which the receiver is connected
- Consult the dealer or experienced
radio/TV technician for help

This Device complies with Part 15 of the
FCC Rules. Operation is subject to the
following two conditions:

- (1) This device may not cause harmful
interference, and
- (2) This device must accept any
interference received, including
interference that may cause
undesired operation.

This device complies with Industry
Canada Licence-exempt RSS-210.
Operation is subject to the following two
conditions:

- (1) This device may not cause
interference, and
- (2) This device must accept any
interference, including interference
that may cause undesired operation
of the device.

For these purposes, the party responsible
is:

WowWee USA Inc.
875 Prospect Street
Suite 204A
La Jolla, CA 92037

1-800-310-3033

WARNING! This equipment may experience difficulty and/or memory loss when subjected to any electrostatic discharge, radio frequency interference, or sudden power surge/interruption. The user is encouraged to reset the equipment should any of these occur.



www.wowwee.com





APP FUNCTIONALITY

Robosapien Blue™ can interact wirelessly with an iPhone® 4s and above, iPod touch® 5G, iPad® 3, iPad® 4, iPad mini™, iPad Air®, or select Android™ Bluetooth® Smart-Ready™ devices. Apple® devices must be running iOS 8 or above. Android™ devices must be running Android™ 4.4.3 or above.

Downloading the App

For Apple® Devices:



Go to the App StoreSM and search for RoboRemote Bluetooth. Alternatively, open a browser and use the following link: appstore.com/roboremotelbluetooth. Then, click download.

For Android™ Devices:

Go to the Google Play™ Store or Amazon Appstore™ and search for RoboRemote Bluetooth. Then, click download.

Connecting to Robosapien Blue™ with your device

To connect Robosapien Blue™ with your device:

1. Turn Robosapien Blue™ On as instructed in Operation Overview (pg 5).
2. Open the Robosapien Blue™ App on your device.
3. The App will bring up your Robosapien Blue™'s ID in a list of available devices.
4. Follow the on-screen instructions to interact with Robosapien Blue™'s using your device.

Q: *My Robosapien Blue™ won't show up in the app when I try to connect.*

A: Make sure your Robosapien Blue™ has fresh batteries and is turned on, then close the app and switch Bluetooth® on/off in your device settings. If you are still having problems, try restarting your device completely.

Q: *My Robosapien Blue™ disconnects often or is much slower than usual.*

A: This is most likely caused by interference. Ensure that there are no other Bluetooth® devices connected (especially audio devices), as these can cause interference which can cause issues. If you are still having problems, try turning Wi-Fi off to reduce interference.

Q: *When I try to download the Robosapien Blue™ application onto my Android™ phone, it says it's incompatible with my device.*

A: Robosapien Blue™ only works with devices which are Bluetooth® Smart-Ready™ and running compatible operating systems. Please ensure that your device is smart ready. If you are still in doubt, check the compatibility list located on our website: www.wowweezone.com.

Q: *I cannot access Google Play™ on my device, how can I download the application?*

A: Try downloading the application on the Amazon AppStore™ or other free app stores.